



THE EASTERN SPECIALTY COMPANY

OPERATIONS MANUAL

METER SITE ANALYZER

PRODUCT:

CATALOG NO. 6330

**METER SITE ANALYZER
OPERATIONS MANUAL
CATALOG NO. 6330**



THE EASTERN SPECIALTY COMPANY

© 2020 TESCO - The Eastern Specialty Company

All Rights Reserved.

Specifications are subject to change without prior notice.

Revision: 1.0

TESCO – The Eastern Specialty Company

925 Canal Street Bristol, PA, 19007

Phone: 215.228.0500

support@tescometering.com

tescometering.com

LIMITED WARRANTY & LIMITATION OF LIABILITY

TESCO warrants to the original purchaser that it will correct all defects in material and/or workmanship in the Instrument, test equipment or software covered by this warranty (herein called "PRODUCT"), provided that TESCO is notified of such defect within the warranty period (set forth below) in accordance with paragraph four of this Warranty.

WARRANTY PERIOD. The warranty period shall begin on the date of shipment of the PRODUCT or the date of the issuance of this warranty certificate, whichever is later. If no warranty period is specified below and signed by an authorized DISTRIBUTOR of TESCO, the Warranty Period shall be one (1) year. In no event shall this Warranty remain in effect for more than the stated Warranty Period plus two (2) months after the date of shipment. TESCO's sole obligation and the purchaser's sole remedy under this Warranty is limited to repair or replacement, at TESCO's option, free of charge, F.O.B. TESCO's factory at Bristol, PA of any workmanship and/or part which in TESCO's sole judgment displays evidence of defect. On-site Warranty repairs will be made when in TESCO's judgment the PRODUCT cannot practically be shipped to TESCO's factory. Any modifications, additions or upgrades made to the PRODUCT or control software after this warranty becomes effective shall not extend the term of this warranty.

COVERAGE. The warranty set forth above shall be applicable only if the PRODUCT:

1. Is used for the specific purpose for which it was intended;
2. Is operated in accordance with instructions, if any, supplied by TESCO;
3. Has not been modified, neglected, altered, tampered with, vandalized, abused or misused, or subjected to accident, fire, flood or other casualties;
4. Has not been repaired by unauthorized persons;
5. Has not had its serial number altered, defaced or removed;
6. Has not been connected, installed or adjusted other than in accordance with the instructions, if any, furnished by TESCO.

The warranty set forth herein DOES NOT APPLY to defects resulting from ordinary wear, tear and usage, or any cause, similar or dissimilar, not resulting solely from defective material and/or workmanship.

The Warranty set forth herein shall NOT be effective unless:

1. Notice of defect is given to TESCO by phone, fax, email or mail as soon as the defect is discovered.
2. Notice of defect contains the following information: PRODUCT serial number, PRODUCT model number, date of original installation, and an accurate and complete description of the defect including the exact circumstances leading to the defect.
3. The defective PRODUCT or part is returned only upon authorization from TESCO as evidenced by the issuing of a Return Merchandise Authorization (RMA) number, and that the transportation charges are prepaid (except that TESCO may, at its option, appoint a qualified DISTRIBUTOR to make field inspections of the PRODUCT for which purpose the purchaser shall permit such DISTRIBUTOR to enter upon its premises and examine the PRODUCT).
4. The Return Merchandise Authorization (RMA) number is written on the shipping label and all paperwork defective PRODUCT or part.
5. The defective PRODUCT or part is returned in the original packing or packing approved by TESCO

TESCO is not responsible for drayage charges, damages or labor costs incurred in conjunction with failure, removal, or reinstallation of any PRODUCT, all of which shall be at the purchaser's expense. TESCO is not responsible for special, incidental, or consequential damages, whether resulting from breach of warranty, negligence, or any other reason.

TESCO manufactured parts will be available for a minimum period of at least two years after the manufacture of a PRODUCT has been discontinued.

TESCO will provide original purchaser during the Warranty Period, unlimited telephone consulting time for the purpose of PRODUCT trouble shooting/servicing and for the first thirty (30) days of the Warranty Period, unlimited telephone consulting time for the purpose of PRODUCT/software application.

THE WARRANTY CONTAINED HEREIN IS IN LIEU OF ALL OTHER WARRANTIES AND TESCO MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OR CONDITION, DESIGN, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR ANY OTHER MATTER.

No other Warranty, express or implied, is authorized by TESCO, and no DISTRIBUTOR of TESCO or any other person has any authority to amend, extend, modify, enlarge or otherwise alter the foregoing warranty and disclaimers in any way whatsoever, except as provided for in an Extended Limited PRODUCT Warranty Agreement.

TABLE OF CONTENTS

1.0 INTRODUCTION	1
1.1 Introduction	2
1.2 Contacting TESCO.....	2
1.3 General Safety Summary.....	3
1.4 Description of Safety-related Icons.....	3
1.5 Product Features	4
1.5.1 Key Features	4
1.5.2 Standard Features.....	4
1.5.3 Standard Unit.....	4
1.5.4 Additional Items.....	4
1.5.5 Optional Accessories	5
1.6 General Specifications.....	5
1.6.1 Input Characteristics	5
1.6.2 Dimensions	5
1.6.3 Accuracy.....	5
1.7 About this Operations Manual	6
2.0 SETUP	7
2.1 Introduction	8
2.2 Unpacking and Inspection	8
2.3 Setup and Cooling Considerations	8
2.3.1 Setup and Placement	8
2.4 Main Power Supply.....	9
3.0 FUNCTIONALITY	10
3.1 Introduction	12
3.2 Panel Features	12
3.2.1 Front Panel	12
3.2.2 Side Panel.....	13
3.2.3 Front Panel Buttons.....	13
3.3 The Graphical User Interface (GUI)	14
3.3.1 GUI Screen Sections.....	14
3.3.2 Fast Access Functions	15

3.3.2a Metrology	15
3.3.2b Phasors	16
3.3.2c Waveforms.....	17
3.3.2d Harmonics.....	17
3.3.3 Main Menu.....	18
3.3.3.1 Manual Mode	19
3.3.3.1a Meter Test	19
3.3.3.1b Meter Test Results	22
3.3.3.1c CT Testing.....	24
3.3.3.1d Quick Test.....	28
3.3.3.1e Pulse Alignment Check.....	28
3.3.3.2 Sequence Testing	29
3.3.3.3 Database.....	30
3.3.3.3a Add/Edit Site	31
3.3.3.3b Add/Edit Meter	32
3.3.3.3c Add/Edit CT.....	33
3.3.3.3d New/Edit Customer	34
3.3.3.3e Test Results.....	34
3.3.3.3f Add/Edit Sequences.....	35
3.3.3.4 Settings	36
3.3.3.4a General Options	36
3.3.3.4b Users	37
3.3.3.4c Colors/Beepers Options	37
3.3.3.4d Testing Options	38
3.3.3.4e Calibration Options	38
3.3.3.5 System Information.....	39
3.3.3.5a Temperature.....	39
3.3.3.5b Configuration	40
3.3.3.5c Serial Numbers	40
3.3.3.5d Software Versions	41
3.3.3.5e Calibration	41
4.0 CONFIGURATIONS.....	42
4.1 Meter Test.....	43

4.1.1 Demand Test	43
4.1.1 Energy Test	44
4.2 CT Test.....	44
4.3 Sequence Test.....	45
5.0 MAINTENANCE	46
5.1 Introduction	47
5.2 Cleaning the Site Analyzer’s External Surface	47
5.3 Repair / Parts Replacement / Recalibration.....	47

1.0 INTRODUCTION

1.1 Introduction	Error! Bookmark not defined.
1.2 Contacting TESCO	Error! Bookmark not defined.
1.3 General Safety Summary	Error! Bookmark not defined.
1.4 Description of Safety-related Icons	Error! Bookmark not defined.
1.5 Product Features	Error! Bookmark not defined.
1.5.1 Key Features	Error! Bookmark not defined.
1.5.2 Standard Features	Error! Bookmark not defined.
1.5.3 Standard Unit	Error! Bookmark not defined.
1.5.4 Additional Items	Error! Bookmark not defined.
1.5.5 Optional Accessories	Error! Bookmark not defined.
1.6 General Specifications	Error! Bookmark not defined.
1.6.1 Input Characteristics	Error! Bookmark not defined.
1.6.2 Dimensions	Error! Bookmark not defined.
1.6.3 Accuracy	Error! Bookmark not defined.
1.7 About this Operations Manual	Error! Bookmark not defined.

1.1 Introduction

The most versatile Site Testing tool in a small, lightweight package!

Studies have shown that at transformer-rated sites, the vast majority of issues are related to wiring, CTs, PTs, and other issues. If you want to be sure the customer is billed correctly and you are not losing revenue, you must test the whole site, not just the meter — this is where TESCO's Meter Site Analyzer (Catalog No. 6330) comes in.

The 6330 revolutionizes meter site testing by providing a small, lightweight package!

It is the most versatile and complete tool for testing the entire functionality of transformer-rated metering installation in a convenient, portable, and lightweight kit. It can perform CT Testing (Ratio, Burden Only, Admittance), Demagnetization, Demand Testing, Customer Load or Phantom Load Testing (5-amp Current Load Box), and more! It has a database for storing test results that you can export to your PC.

Since 1904, customers have trusted TESCO for accuracy and reliability. When you think metering, think TESCO.

CAT. 6330 will be referred as "Site Analyzer" throughout the operational manual.

1.2 Contacting TESCO

For Technical Support or Calibration/Repair, please call 215.228.0500.

You can also send an email to support@tescometering.com with any questions.

To view, print, or download the latest manual supplement, visit www.tescometering.com.

1.3 General Safety Summary

This manual contains information and warnings that must be observed to ensure safe operation and keep the Site Analyzer in a safe condition. Operation or service in conditions or in a manner other than specified could compromise safety. For the correct and safe use of the site analyzer, **it is essential that both operating and service personnel follow accepted safety procedures in addition to the safety precautions specified**, including proper PPE guidelines.



In this manual, a **WARNING** identifies conditions and actions that pose hazard(s) to the user, while a **CAUTION** identifies conditions and actions that may damage the Site Analyzer or the test equipment.

WARNING

To avoid electrical shock, personal injury, or fire hazard:

- The site analyzer must not be switched ON if it is damaged or suspected to be faulty.
- Do not operate the site analyzer in wet, condensing, dusty, or explosive gas conditions.
- If the equipment is used in a manner not specified in this manual, the protection provided by the Site Analyzer may be impaired.
- Whenever it is likely that safety protection has been impaired, the site analyzer must be made inoperative and be secured against any unintended operation. Inform qualified maintenance or repair personnel.
- Safety protection is likely to be impaired if, for example, the Site Analyzer displays visible damage or fails to operate normally.

1.4 Description of Safety-related Icons

ICONS	DESCRIPTION
	Risk of danger. Important information. See manual.
	Hazardous voltage. Risk of electrical shock.

1.5 Product Features

1.5.1 Key Features

- **Voltage Drive:** 50-650V, 920V peak
- **Current Drive:** 0.1-21A, 30A peak
- **Meter Testing (Demand, Timed Run, Timed Register, Energy Delivery)**
- **CT Testing (Ratio, Burden Only, Ratio and Burden, Admittance, Demagnetization)**
- **Meter Accuracy Testing (T. A. is 5 amp)**
- **“Fast Key” Anytime Data (Metrology, Phasor Diagrams, Live Waveforms, Harmonics up to 50th)**

1.5.2 Standard Features

- **GRAPHICAL USER INTERFACE (GUI)**
Displayed on a 7” 800x480, 1,000 nit color display, readable on direct sunlight
- **ETHERNET CONNECTIVITY**
100 BaseT with support for: Web Services, Remote Control, Database Access. 7” RJ45 standard (blue) and crossover (red) cables are provided.
- **INTEGRATED CONTROL KEYPAD**
The keypad is embedded in the front panel.
- **LOAD BOX**
True three-phase with current of 0-5A with full harmonics.

1.5.3 Standard Unit

These are the standard items included in the package:

- 6330 TESCO Meter Site Analyzer
- Optical pickup (1037-SA) with 9.84 ft. cable, Next Gen compatible
- Battery charger (90W 19VDC output, 85 -264VAC input with 6 ft. cord)

1.5.4 Additional Items

These items are necessary for the unit to fully function and have a few varieties to choose from:

- Jumper Sets
- Current Cable Sets
- Voltage Cable Sets
- Test Clips for Voltage
- Rogowski Coil(s)

1.5.5 Optional Accessories

- SENSORLINK high voltage probe
- 50 ft. extension cables for Rogowski coils
- Diamond Level Support

1.6 General Specifications

1.6.1 Input Characteristics

PARAMETERS	DATA
Supply Frequency	50/60Hz
Power Supply Adaptor Output	19VDC, 4.74A
Power	90W Max.

1.6.2 Dimensions

PARAMETERS	DATA
Height	Lid closed: 6.7" (17.01 cm)
Width	13.9" (35.30 cm)
Depth	18.2" (46.22 cm)
Weight	17.8 lbs (8.07 kg)

1.6.3 Accuracy

PARAMETERS	DATA
Voltage Measurement Accuracy	±0.02%
Current Measurement Accuracy	±0.02%
Phase	±0.005 degrees
Power Measurements Accuracy (Watts / VA / VAR)	±0.04%, ±0.02% typical
Energy Measurements Accuracy (WHrs / VAHrs / VARHrs)	±0.04%, ±0.02% typical
Probe Channels	±0.02%

1.7 About this Operations Manual

This manual provides complete information for setting up and operating the Site Analyzer. This document instructs the user on the following operations of the CAT. 6330:

- Setup
- Front Panel Features
- Graphical User Interface (GUI)
- How to perform tests
- Site analyzer Maintenance

2.0 SETUP

2.1 Introduction Error! Bookmark not defined.

2.2 Unpacking and Inspection Error! Bookmark not defined.

2.3 Setup and Cooling Considerations Error! Bookmark not defined.

2.3.1 Setup and Placement Error! Bookmark not defined.

2.4 Main Power Supply..... Error! Bookmark not defined.

2.1 Introduction

This chapter provides instructions for unpacking and the proper setup for the Site Analyzer. Read this chapter before you operate the Site Analyzer. Instructions for cable connections can be found here.

2.2 Unpacking and Inspection

The Site Analyzer is shipped in a container designed to prevent damage during shipping.

Inspect the Site Analyzer carefully for damage, and immediately report any damage to the shipper. A packing list is included in the packaging. When you unpack the Site Analyzer, check for all the standard equipment listed and check the shipping order for any additional items ordered. Report any shortage to the place of purchase, your distributor, or directly to TESCO.

2.3 Setup and Cooling Considerations

2.3.1 Setup and Placement

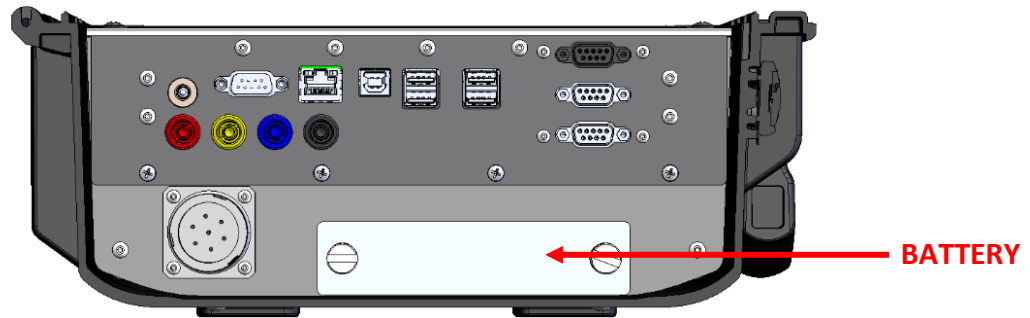
The Site Analyzer is a versatile and portable unit that you can easily adapt to your surroundings, on a site or inside the shop. The long cords allow for the placement for a Site Analyzer to be as close or as far from the site as possible.

Make sure to lay the Site Analyzer flat when using, and make sure there is proper ventilation for the fans on the side.



2.4 Main Power Supply

The Site Analyzer is fully battery powered and the battery can be charged in or outside of the unit from AC or DC. The battery can easily be swapped out. Additional chargers are available for purchase from TESCO or your distributor.



WARNING

To avoid electrical shock, personal injury, or fire hazard, connect the factory-supplied three-conductor-line power cord to a properly grounded power outlet.

During test operation, a two-conductor adapter or extension cord **MUST NOT** be used. This will break the protective ground connection and will affect the measurement accuracy of the Site Analyzer.

The power outlets supplying the Site Analyzer system should be controlled by an emergency switch so that power can be switched off if a hazard arises.

3.0 FUNCTIONALITY

- 3.1 Introduction Error! Bookmark not defined.
- 3.2 Panel Features Error! Bookmark not defined.
 - 3.2.1 Front Panel Error! Bookmark not defined.
 - 3.2.2 Side Panel Error! Bookmark not defined.
 - 3.2.3 Front Panel Buttons Error! Bookmark not defined.
- 3.3 The Graphical User Interface (GUI) Error! Bookmark not defined.
 - 3.3.1 GUI Screen Sections Error! Bookmark not defined.
 - 3.3.2 Fast Access Functions Error! Bookmark not defined.
 - 3.3.2a Metrology **Error! Bookmark not defined.**
 - 3.3.2b Phasors **Error! Bookmark not defined.**
 - 3.3.2c Waveforms **Error! Bookmark not defined.**
 - 3.3.2d Harmonics **Error! Bookmark not defined.**
 - 3.3.3 Main Menu Error! Bookmark not defined.
 - 3.3.3.1 Manual Mode **Error! Bookmark not defined.**
 - 3.3.3.1a Meter Test **Error! Bookmark not defined.**
 - 3.3.3.1b Meter Test Results **Error! Bookmark not defined.**
 - 3.3.3.1c CT Testing **Error! Bookmark not defined.**
 - 3.3.3.1d Quick Test **Error! Bookmark not defined.**
 - 3.3.3.1e Pulse Alignment Check **Error! Bookmark not defined.**
 - 3.3.3.2 Sequence Testing **Error! Bookmark not defined.**
 - 3.3.3.3 Database **Error! Bookmark not defined.**
 - 3.3.3.3a Add/Edit Site **Error! Bookmark not defined.**
 - 3.3.3.3b Add/Edit Meter **Error! Bookmark not defined.**
 - 3.3.3.3c Add/Edit CT **Error! Bookmark not defined.**
 - 3.3.3.3d New/Edit Customer **Error! Bookmark not defined.**
 - 3.3.3.3e Test Results **Error! Bookmark not defined.**
 - 3.3.3.3f Add/Edit Sequences **Error! Bookmark not defined.**
 - 3.3.3.4 Settings **Error! Bookmark not defined.**
 - 3.3.3.4a General Options **Error! Bookmark not defined.**

3.3.3.4b Users Error! Bookmark not defined.
3.3.3.4c Colors/Beepers Options Error! Bookmark not defined.
3.3.3.4d Testing Options Error! Bookmark not defined.
3.3.3.4e Calibration Options Error! Bookmark not defined.
3.3.3.5 System Information..... Error! Bookmark not defined.
3.3.3.5a Temperature..... Error! Bookmark not defined.
3.3.3.5b Configuration Error! Bookmark not defined.
3.3.3.5c Serial Numbers Error! Bookmark not defined.
3.3.3.5d Software Versions Error! Bookmark not defined.
3.3.3.5e Calibration Error! Bookmark not defined.

3.1 Introduction

This chapter is a reference for the functions and locations of the Site Analyzer’s front panel features and provides brief descriptions of each feature for quick access. **Please read this information before operating the Site Analyzer.** Front panel operating instructions for the Site Analyzer are provided in this chapter.

3.2 Panel Features

Front panel features (controls, displays, indicators) and side panel sections (terminals) are shown in Figure 3.2.1 and Figure 3.2.2 respectively.

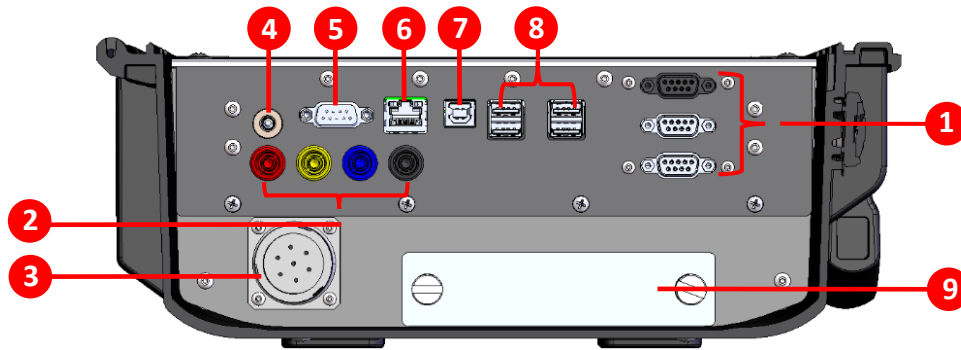
3.2.1 Front Panel



NUMBER	DESCRIPTION
1	LCD screen
2	Function keys
3	Keypad
4	Fast access keys
5	Power button
6	Navigation buttons

Table 3.2.1. CAT. 6330 Front Panel Sections

3.2.2 Side Panel








NUMBER	DESCRIPTION
1	Rogowski Current Probe Terminals
2	Fused Voltage Lead Terminals
3	Current Cable Terminal
4	Battery Charger Input Terminal
5	Optical Pickup Terminal
6	Ethernet Communication
7	USB type-B port
8	USB type-A ports
9	Battery Compartment

Table 3.2.2. CAT. 6330 Side Panel Sections

3.2.3 Front Panel Buttons

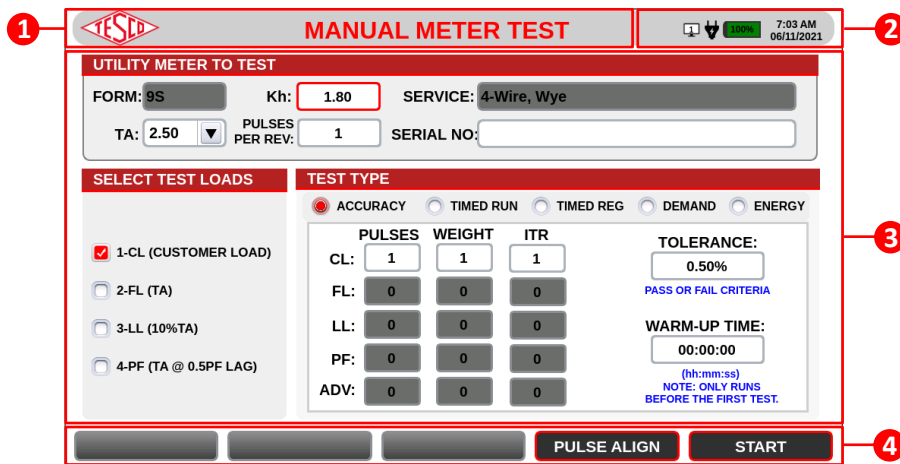
SYMBOL	DESCRIPTION
	<ul style="list-style-type: none"> • Selects the NEXT or PREVIOUS menu item • Moves the SELECTED LINE UP or DOWN • Selects an Item from a dropdown menu
	<ul style="list-style-type: none"> • Moves the cursor left/right of the current character in text boxes. • Moves the selection left/right of the current selected cell in tables.
	Selects the NEXT or PREVIOUS TAB item.
	Moves the focus from one section of the screen to another
	Displays many of the metrology values in tabular form.
	Displays a phasor diagram for the active phases. Diagram is continuously updated.
	Displays live waveforms.
	Displays harmonic analysis up to the 50 th .
	Deletes the previous character.

	Returns to the previous screen.
	Function keys
	Power button. Hold down to turn the site analyzer on until the LED lights up and wait for a few seconds for the screen to load.
	Selects a response.
	Provides context-sensitive help.

3.3 The Graphical User Interface (GUI)

3.3.1 GUI Screen Sections

The user interface is divided into four sections. In the screen, any field or button that is grayed out cannot be changed or accessed by the user.






NUMBER	DESCRIPTION
1	Screen Title
2	Status Bar
3	Screen Data
4	Function Buttons

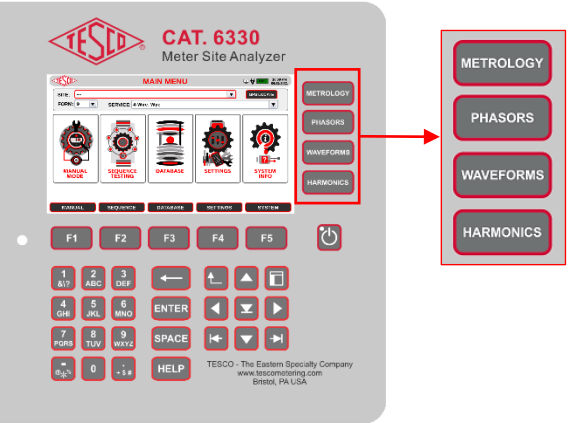
Table 3.3.1. CAT. 6330 GUI Sections

STATUS BAR ICONS

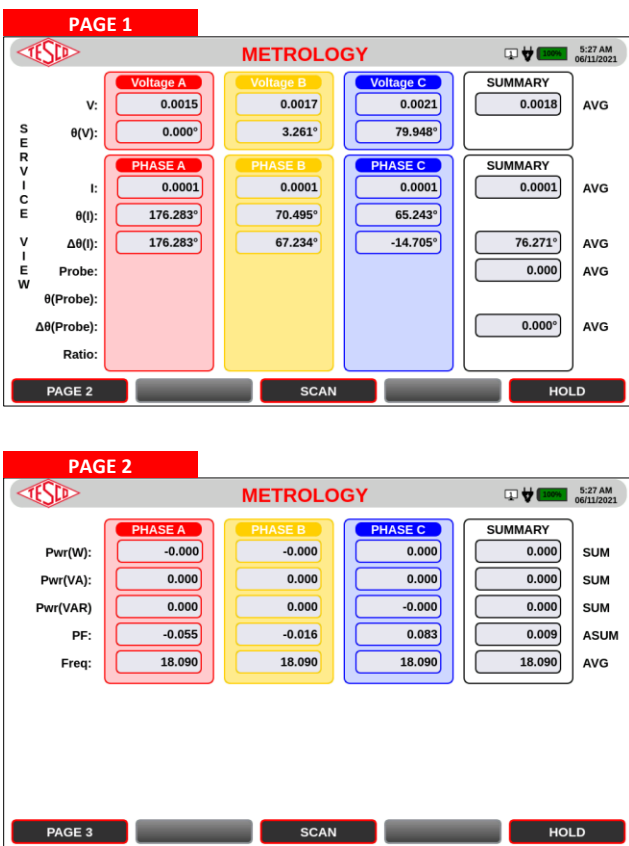
These icons are located at the status bar of the screen. They are indicators of different network connections and temperature levels of the site analyzer.

ICON	NAME	DESCRIPTION
	Wired Connection	LAN/Ethernet connection is enabled. The number represents the number of users remotely connected to the site analyzer.
	Extremely Hot Temperature	The Site Analyzer's temperature is above 158°F (70°C).
	Charging	The Site Analyzer is charging.

3.3.2 Fast Access Functions

SCREEN	DESCRIPTION
	<p>The "FAST" access buttons provide instant access to various measurements at any time.</p> <p>Pressing one of the buttons brings up the display regardless of what is shown on the screen. Pressing the same button again shows the previous screen. If one FAST display is showing and a second FAST button is pressed, the latter FAST button will then be displayed.</p>

3.3.2a Metrology

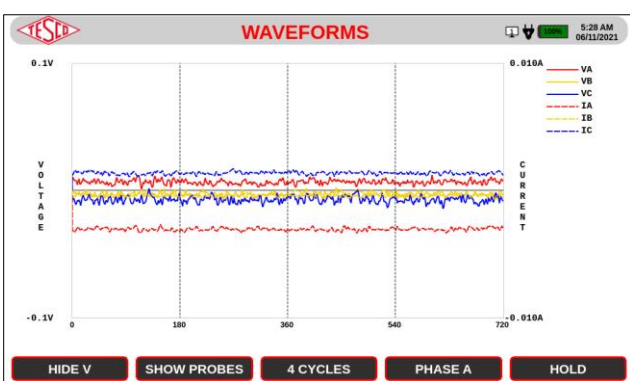
SCREEN	DESCRIPTION																		
	<p>Displays many of the metrology values in tabular form. If no test is in progress, then the TREND PLOT and RECORD functions are available.</p> <p>The SEL column is used to select which parameters are used in a TREND PLOT or WAVEFORM RECORDING. Use the arrow keys to navigate through each of the parameter and press ENTER to select/deselect.</p> <p>FUNCTION KEYS:</p> <table border="1" data-bbox="836 1239 1461 1596"> <tr> <td>F1</td> <td>PAGE N</td> <td>Show a certain page of measurements, with N as the page number</td> </tr> <tr> <td>F2</td> <td></td> <td></td> </tr> <tr> <td>F3</td> <td>SCAN</td> <td>Voltages and currents are scanned and evaluated to see if they match the site configuration specified.</td> </tr> <tr> <td>F4</td> <td></td> <td></td> </tr> <tr> <td>F5</td> <td>HOLD</td> <td>Freeze the data acquisition.</td> </tr> <tr> <td></td> <td>LIVE</td> <td>Change to showing live data.</td> </tr> </table>	F1	PAGE N	Show a certain page of measurements, with N as the page number	F2			F3	SCAN	Voltages and currents are scanned and evaluated to see if they match the site configuration specified.	F4			F5	HOLD	Freeze the data acquisition.		LIVE	Change to showing live data.
F1	PAGE N	Show a certain page of measurements, with N as the page number																	
F2																			
F3	SCAN	Voltages and currents are scanned and evaluated to see if they match the site configuration specified.																	
F4																			
F5	HOLD	Freeze the data acquisition.																	
	LIVE	Change to showing live data.																	

SCREEN	DESCRIPTION																		
<p>PAGE 3</p> <p>METROLOGY 5:27 AM 06/13/2022</p> <table border="1"> <tr> <td>THD(V) %:</td> <td>THD(V) A 327.41</td> <td>THD(V) B 809.01</td> <td>THD(V) C 855.57</td> <td>SUMMARY 664.00</td> <td>AVG</td> </tr> <tr> <td>THD(I) %:</td> <td>PHASE A 596.47</td> <td>PHASE B 847.07</td> <td>PHASE C 641.45</td> <td>SUMMARY 695.00</td> <td>AVG</td> </tr> <tr> <td>THD(Probe) %:</td> <td></td> <td></td> <td></td> <td>SUMMARY 0.00</td> <td>AVG</td> </tr> </table> <p>PAGE 1 SCAN HOLD</p>	THD(V) %:	THD(V) A 327.41	THD(V) B 809.01	THD(V) C 855.57	SUMMARY 664.00	AVG	THD(I) %:	PHASE A 596.47	PHASE B 847.07	PHASE C 641.45	SUMMARY 695.00	AVG	THD(Probe) %:				SUMMARY 0.00	AVG	
THD(V) %:	THD(V) A 327.41	THD(V) B 809.01	THD(V) C 855.57	SUMMARY 664.00	AVG														
THD(I) %:	PHASE A 596.47	PHASE B 847.07	PHASE C 641.45	SUMMARY 695.00	AVG														
THD(Probe) %:				SUMMARY 0.00	AVG														

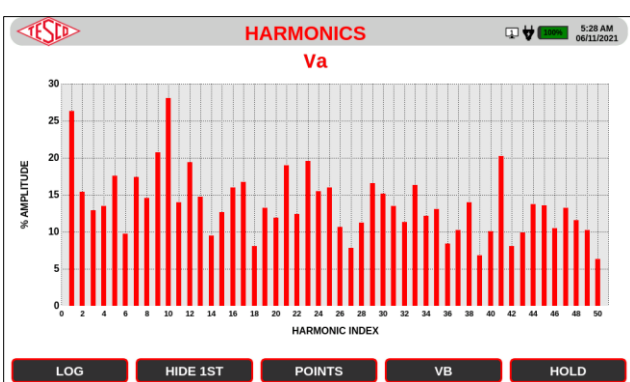
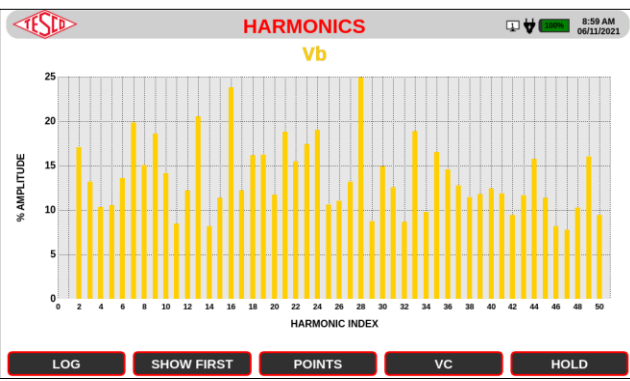

3.3.2b Phasors

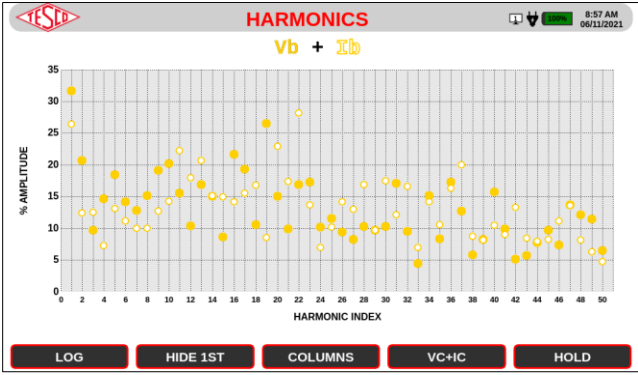
SCREEN	DESCRIPTION																																																						
<p>PHASORS 5:28 AM 06/13/2022</p> <p>SECONDARY 270°</p> <p>180° 0°</p> <p>90°</p> <p>PHASE ROTATION: ABC</p> <p>PRIMARY HOLD</p> <p>SERVICE VIEW</p> <table border="1"> <tr> <td>Voltage A</td> <td>Voltage B</td> <td>Voltage C</td> </tr> <tr> <td>V: 0.0016</td> <td>0.0014</td> <td>0.0022</td> </tr> <tr> <td>θ(V): 0.000°</td> <td>337.301°</td> <td>14.512°</td> </tr> <tr> <td>Phase A</td> <td>Phase B</td> <td>Phase C</td> </tr> <tr> <td>I: 0.0001</td> <td>0.0001</td> <td>0.0001</td> </tr> <tr> <td>θ(I): 239.372°</td> <td>248.381°</td> <td>329.295°</td> </tr> <tr> <td>Δθ(I): -120.628°</td> <td>-88.920°</td> <td>-45.217°</td> </tr> <tr> <td>Probe:</td> <td></td> <td></td> </tr> <tr> <td>θ(Probe):</td> <td></td> <td></td> </tr> <tr> <td>Δθ(Probe):</td> <td></td> <td></td> </tr> <tr> <td>Ratio:</td> <td></td> <td></td> </tr> </table>	Voltage A	Voltage B	Voltage C	V: 0.0016	0.0014	0.0022	θ(V): 0.000°	337.301°	14.512°	Phase A	Phase B	Phase C	I: 0.0001	0.0001	0.0001	θ(I): 239.372°	248.381°	329.295°	Δθ(I): -120.628°	-88.920°	-45.217°	Probe:			θ(Probe):			Δθ(Probe):			Ratio:			<p>Displays a phasor diagram for the active phases. Diagram is continuously updated.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1"> <tr> <td>F1</td> <td>PRIMARY</td> <td>Switch to the primary reading.</td> </tr> <tr> <td></td> <td>SECONDARY</td> <td>Switch to the secondary reading.</td> </tr> <tr> <td>F2</td> <td></td> <td></td> </tr> <tr> <td>F3</td> <td></td> <td></td> </tr> <tr> <td>F4</td> <td></td> <td></td> </tr> <tr> <td></td> <td>HOLD</td> <td>Freeze the data acquisition.</td> </tr> <tr> <td>F5</td> <td>LIVE</td> <td>Change to showing live data.</td> </tr> </table>	F1	PRIMARY	Switch to the primary reading.		SECONDARY	Switch to the secondary reading.	F2			F3			F4				HOLD	Freeze the data acquisition.	F5	LIVE	Change to showing live data.
Voltage A	Voltage B	Voltage C																																																					
V: 0.0016	0.0014	0.0022																																																					
θ(V): 0.000°	337.301°	14.512°																																																					
Phase A	Phase B	Phase C																																																					
I: 0.0001	0.0001	0.0001																																																					
θ(I): 239.372°	248.381°	329.295°																																																					
Δθ(I): -120.628°	-88.920°	-45.217°																																																					
Probe:																																																							
θ(Probe):																																																							
Δθ(Probe):																																																							
Ratio:																																																							
F1	PRIMARY	Switch to the primary reading.																																																					
	SECONDARY	Switch to the secondary reading.																																																					
F2																																																							
F3																																																							
F4																																																							
	HOLD	Freeze the data acquisition.																																																					
F5	LIVE	Change to showing live data.																																																					

3.3.2c Waveforms

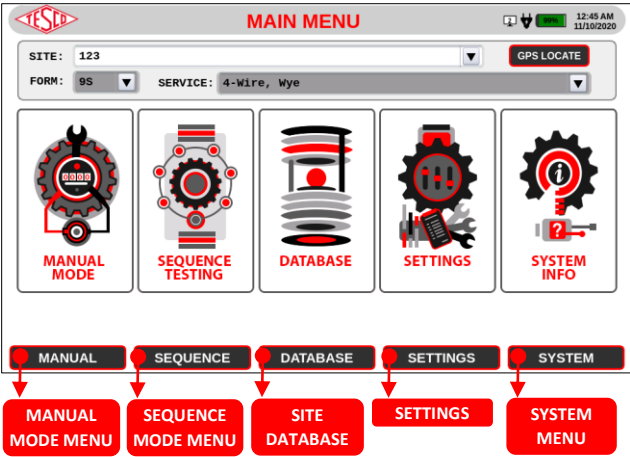

SCREEN	DESCRIPTION																	
	<p>Displays live waveforms with recording functionality.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1"> <tr> <td>F1</td> <td>HIDE V</td> <td>Hide or show the voltage waveforms.</td> </tr> <tr> <td>F2</td> <td>HIDE I</td> <td>Hide or show the current waveforms.</td> </tr> <tr> <td>F3</td> <td>N CYCLES</td> <td>Select the number of cycles to be displayed: 1, 2, 4, 8</td> </tr> <tr> <td>F4</td> <td>PHASE A</td> <td>Shift between ALL, Phase A, Phase B and Phase C.</td> </tr> <tr> <td rowspan="2">F5</td> <td>HOLD</td> <td>Freeze the data acquisition.</td> </tr> <tr> <td>LIVE</td> <td>Change to showing live data.</td> </tr> </table>	F1	HIDE V	Hide or show the voltage waveforms.	F2	HIDE I	Hide or show the current waveforms.	F3	N CYCLES	Select the number of cycles to be displayed: 1, 2, 4, 8	F4	PHASE A	Shift between ALL, Phase A, Phase B and Phase C.	F5	HOLD	Freeze the data acquisition.	LIVE	Change to showing live data.
F1	HIDE V	Hide or show the voltage waveforms.																
F2	HIDE I	Hide or show the current waveforms.																
F3	N CYCLES	Select the number of cycles to be displayed: 1, 2, 4, 8																
F4	PHASE A	Shift between ALL, Phase A, Phase B and Phase C.																
F5	HOLD	Freeze the data acquisition.																
	LIVE	Change to showing live data.																

3.3.2d Harmonics

SCREEN	DESCRIPTION																							
 <p><i>Voltage A, log display with 1st harmonic displayed.</i></p>  <p><i>Voltage B, log display with 1st harmonic suppressed.</i></p>	<p>Displays live reading of the harmonics up to the 50th. Data can be represented by columns or points.</p> <p>NOTE: The phase colors were changed in 3.3.2.4b Colors/Beeper Options.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1"> <tr> <td>F1</td> <td>LOG</td> <td>Change Y axis from linear to log scale.</td> </tr> <tr> <td rowspan="2">F2</td> <td>SHOW FIRST</td> <td>Show the 1st harmonic (fundamental) so that the display can auto-scale to show more vertical detail.</td> </tr> <tr> <td>HIDE 1ST</td> <td>Hide the 1st harmonic (fundamental).</td> </tr> <tr> <td rowspan="2">F3</td> <td>POINTS</td> <td>Change from a Columns display to a Points display.</td> </tr> <tr> <td>COLUMNS</td> <td>Change from a Points display to a Columns display.</td> </tr> <tr> <td rowspan="3">F4</td> <td>VA</td> <td>Column mode: Shift between Va, Vb, Vc, Ia, Ib, Ic</td> </tr> <tr> <td>VB</td> <td>Point mode: Shift between Ia+Va, Ib+Vb, Ic+Vc, Pa, Pb, Pc</td> </tr> <tr> <td>HOLD</td> <td>Freeze the data acquisition.</td> </tr> <tr> <td>F5</td> <td>LIVE</td> <td>Change to showing live data.</td> </tr> </table> <p>Press  to return to the previous screen.</p>	F1	LOG	Change Y axis from linear to log scale.	F2	SHOW FIRST	Show the 1 st harmonic (fundamental) so that the display can auto-scale to show more vertical detail.	HIDE 1ST	Hide the 1 st harmonic (fundamental).	F3	POINTS	Change from a Columns display to a Points display.	COLUMNS	Change from a Points display to a Columns display.	F4	VA	Column mode: Shift between Va, Vb, Vc, Ia, Ib, Ic	VB	Point mode: Shift between Ia+Va, Ib+Vb, Ic+Vc, Pa, Pb, Pc	HOLD	Freeze the data acquisition.	F5	LIVE	Change to showing live data.
F1	LOG	Change Y axis from linear to log scale.																						
F2	SHOW FIRST	Show the 1 st harmonic (fundamental) so that the display can auto-scale to show more vertical detail.																						
	HIDE 1ST	Hide the 1 st harmonic (fundamental).																						
F3	POINTS	Change from a Columns display to a Points display.																						
	COLUMNS	Change from a Points display to a Columns display.																						
F4	VA	Column mode: Shift between Va, Vb, Vc, Ia, Ib, Ic																						
	VB	Point mode: Shift between Ia+Va, Ib+Vb, Ic+Vc, Pa, Pb, Pc																						
	HOLD	Freeze the data acquisition.																						
F5	LIVE	Change to showing live data.																						

SCREEN	DESCRIPTION
 <p>Voltage B and Current B, linear display with 1st harmonic suppressed in "dots" mode.</p>	

3.3.3 Main Menu

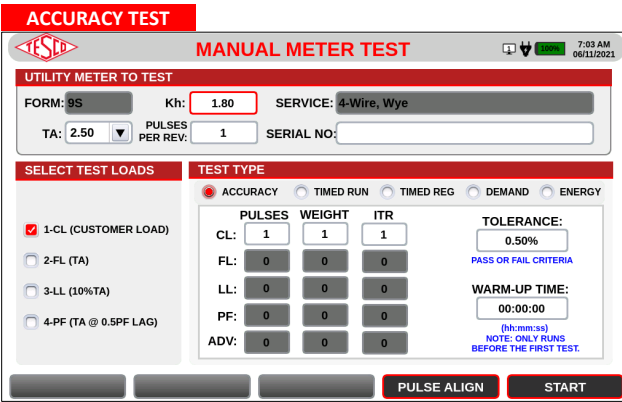
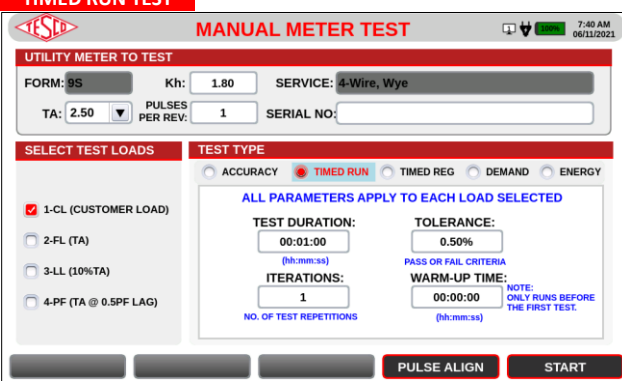
SCREEN	DESCRIPTION																					
	<p>The MAIN MENU contains the core functions of the site analyzer. A site can be selected using the SITE dropdown box. Clicking the GPS LOCATE button will narrow the choices for SITE to those at the current GPS location.</p> <p>If only one site is found, that site will be loaded. If the correct site is not found, go to the DATABASE and create a site or test in MANUAL mode.</p> <p>If no site is selected, then tests can be performed in MANUAL mode, but data cannot be saved to the results database.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1" data-bbox="837 1270 1463 1545"> <tr> <td>F1</td> <td>MANUAL</td> <td>Perform Meter Test, CT Test, or Pulse Alignment Check</td> </tr> <tr> <td>F2</td> <td>SEQUENCE</td> <td>Perform a test sequence</td> </tr> <tr> <td>F3</td> <td>DATABASE</td> <td>Create/View/Edit information in the database: sites, test results, data library, and test sequences</td> </tr> <tr> <td>F4</td> <td>SETTINGS</td> <td>Open the SETTINGS MENU screen</td> </tr> <tr> <td>F5</td> <td>SYSTEM</td> <td>Open the SYSTEM MENU screen</td> </tr> </table> <p>Press  to return to the previous screen.</p> <p>DATA</p> <table border="1" data-bbox="837 1644 1463 1801"> <tr> <td>SITE</td> <td>Choose an existing site configuration.</td> </tr> <tr> <td>FORM</td> <td>Form of the meter. This will be loaded automatically if a site is selected.</td> </tr> <tr> <td>SERVICE</td> <td>Services/wiring configurations available for selected meter form. This will be loaded automatically if a site is selected.</td> </tr> </table>	F1	MANUAL	Perform Meter Test, CT Test, or Pulse Alignment Check	F2	SEQUENCE	Perform a test sequence	F3	DATABASE	Create/View/Edit information in the database: sites, test results, data library, and test sequences	F4	SETTINGS	Open the SETTINGS MENU screen	F5	SYSTEM	Open the SYSTEM MENU screen	SITE	Choose an existing site configuration.	FORM	Form of the meter. This will be loaded automatically if a site is selected.	SERVICE	Services/wiring configurations available for selected meter form. This will be loaded automatically if a site is selected.
F1	MANUAL	Perform Meter Test, CT Test, or Pulse Alignment Check																				
F2	SEQUENCE	Perform a test sequence																				
F3	DATABASE	Create/View/Edit information in the database: sites, test results, data library, and test sequences																				
F4	SETTINGS	Open the SETTINGS MENU screen																				
F5	SYSTEM	Open the SYSTEM MENU screen																				
SITE	Choose an existing site configuration.																					
FORM	Form of the meter. This will be loaded automatically if a site is selected.																					
SERVICE	Services/wiring configurations available for selected meter form. This will be loaded automatically if a site is selected.																					

3.3.3.1 Manual Mode

SCREEN	DESCRIPTION																					
	<p>Manual Mode allows testing without specifying a site or test sequence. If a site was selected on the MAIN MENU, then the information on this screen will automatically be filled in. If no SITE was selected, then one can be selected here, or just a meter form and service can be manually set.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1"> <tr> <td>F1</td> <td>MANUAL</td> <td>Perform a meter test.</td> </tr> <tr> <td>F2</td> <td>CT TEST</td> <td>Perform a CT test.</td> </tr> <tr> <td>F3</td> <td></td> <td></td> </tr> <tr> <td>F4</td> <td></td> <td></td> </tr> <tr> <td>F5</td> <td>PULSE ALIGN</td> <td>Perform to check pulse alignment. See section 3.3.2.1c Pulse Alignment Check for more information.</td> </tr> </table> <p>Press to return to the previous screen.</p> <p>DATA</p> <table border="1"> <tr> <td>SITE</td> <td>Choose an existing site configuration</td> </tr> <tr> <td>FORM</td> <td>Meter form, will be loaded automatically if site is selected</td> </tr> <tr> <td>SERVICE</td> <td>Services/wiring configurations available for selected meter form. This will be loaded automatically if a site is selected.</td> </tr> </table>	F1	MANUAL	Perform a meter test.	F2	CT TEST	Perform a CT test.	F3			F4			F5	PULSE ALIGN	Perform to check pulse alignment. See section 3.3.2.1c Pulse Alignment Check for more information.	SITE	Choose an existing site configuration	FORM	Meter form, will be loaded automatically if site is selected	SERVICE	Services/wiring configurations available for selected meter form. This will be loaded automatically if a site is selected.
F1	MANUAL	Perform a meter test.																				
F2	CT TEST	Perform a CT test.																				
F3																						
F4																						
F5	PULSE ALIGN	Perform to check pulse alignment. See section 3.3.2.1c Pulse Alignment Check for more information.																				
SITE	Choose an existing site configuration																					
FORM	Meter form, will be loaded automatically if site is selected																					
SERVICE	Services/wiring configurations available for selected meter form. This will be loaded automatically if a site is selected.																					

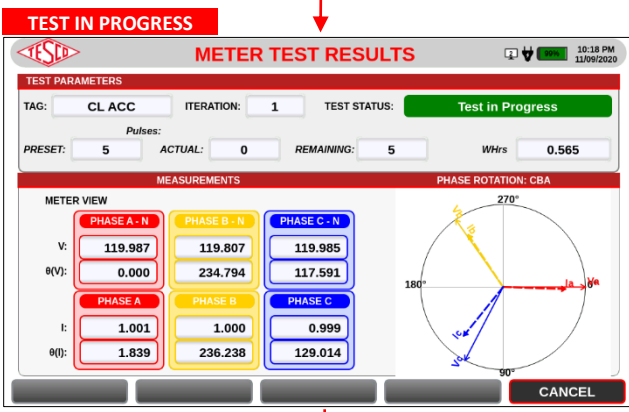
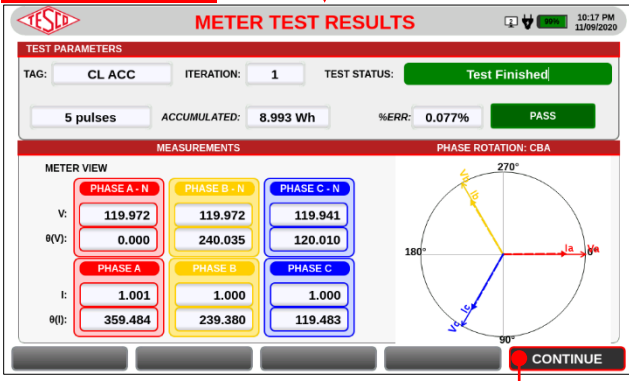
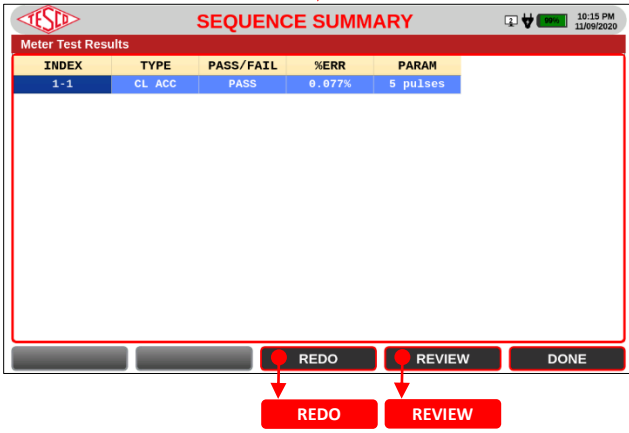
3.3.3.1a Meter Test

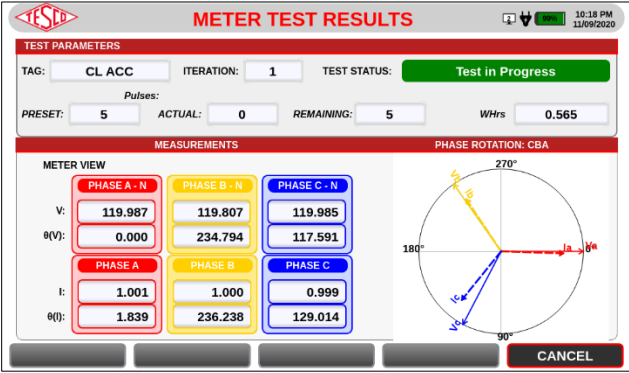
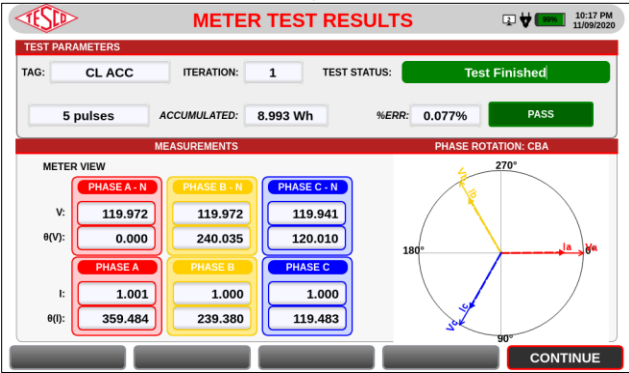
SCREEN	DESCRIPTION																											
	<p>Perform a meter test to determine the accuracy of the meter under different loads.</p> <p>FUNCTION KEYS:</p> <table border="1"> <tr> <td>F1</td> <td></td> <td></td> </tr> <tr> <td>F2</td> <td></td> <td></td> </tr> <tr> <td>F3</td> <td></td> <td></td> </tr> <tr> <td>F4</td> <td>PULSE ALIGN</td> <td>Perform to check pulse alignment. See section 3.3.2.1e Pulse Alignment Check for more information.</td> </tr> <tr> <td>F5</td> <td>START</td> <td>Start the manual meter test.</td> </tr> </table> <p>Press to return to the previous screen.</p> <p>METER PARAMETERS</p> <table border="1"> <tr> <td>FORM</td> <td>Form number of the meter.</td> </tr> <tr> <td>Kh</td> <td>Meter test constant.</td> </tr> <tr> <td>SERVICE</td> <td>Services/wiring configurations available for selected meter form.</td> </tr> <tr> <td>TA</td> <td>Test amp of the meter.</td> </tr> <tr> <td>PULSES PER REV</td> <td>If a meter is configured to generate multiple pulses per Kh, then this is the number of pulses per Kh.</td> </tr> <tr> <td>SERIAL NUMBER</td> <td>Serial number of the meter. This is optional.</td> </tr> </table>	F1			F2			F3			F4	PULSE ALIGN	Perform to check pulse alignment. See section 3.3.2.1e Pulse Alignment Check for more information.	F5	START	Start the manual meter test.	FORM	Form number of the meter.	Kh	Meter test constant.	SERVICE	Services/wiring configurations available for selected meter form.	TA	Test amp of the meter.	PULSES PER REV	If a meter is configured to generate multiple pulses per Kh, then this is the number of pulses per Kh.	SERIAL NUMBER	Serial number of the meter. This is optional.
F1																												
F2																												
F3																												
F4	PULSE ALIGN	Perform to check pulse alignment. See section 3.3.2.1e Pulse Alignment Check for more information.																										
F5	START	Start the manual meter test.																										
FORM	Form number of the meter.																											
Kh	Meter test constant.																											
SERVICE	Services/wiring configurations available for selected meter form.																											
TA	Test amp of the meter.																											
PULSES PER REV	If a meter is configured to generate multiple pulses per Kh, then this is the number of pulses per Kh.																											
SERIAL NUMBER	Serial number of the meter. This is optional.																											

SCREEN	DESCRIPTION																		
	<p>TEST LOADS Customer voltage is used for all tests.</p> <table border="1"> <tr> <td>1-CL (CUSTOMER LOAD)</td> <td>Uses customer load where the site analyzer is measuring the voltage signal and the current signals from both the potential and the current transformers.</td> </tr> <tr> <td>2-FL (TA)</td> <td>Load box provided current of TA at PF=1.0 is used.</td> </tr> <tr> <td>3- LL (10%TA)</td> <td>Load box provided current of 10% TA at PF=1.0 is used.</td> </tr> <tr> <td>4- PF (TA @ 0.5PF LAG)</td> <td>Load box provided current of TA at PF=0.5 lagging is used.</td> </tr> </table> <p>TEST TYPE PARAMETERS A. ACCURACY TEST Perform this test to determine a meter’s accuracy under one or more load conditions.</p> <p>PARAMETERS</p> <table border="1"> <tr> <td>PULSES</td> <td>Sets the number of pulses that the test will be run. Different numbers of pulses can be set for different loading conditions.</td> </tr> <tr> <td>WEIGHT</td> <td>When the overall accuracy for the selected test is computed, a weighted average can be performed. To get the weighted average, the WEIGHT is multiplied by the %ERROR and the product summed over all tests. The result is divided by the total weight of tests performed.</td> </tr> <tr> <td>ITR</td> <td>Iteration of the selected test.</td> </tr> <tr> <td>TOLERANCE</td> <td>Tolerance needed for pass/fail criteria.</td> </tr> <tr> <td>WARM-UP TIME</td> <td>Period of time for meter to stabilize prior to test execution.</td> </tr> </table>	1-CL (CUSTOMER LOAD)	Uses customer load where the site analyzer is measuring the voltage signal and the current signals from both the potential and the current transformers.	2-FL (TA)	Load box provided current of TA at PF=1.0 is used.	3- LL (10%TA)	Load box provided current of 10% TA at PF=1.0 is used.	4- PF (TA @ 0.5PF LAG)	Load box provided current of TA at PF=0.5 lagging is used.	PULSES	Sets the number of pulses that the test will be run. Different numbers of pulses can be set for different loading conditions.	WEIGHT	When the overall accuracy for the selected test is computed, a weighted average can be performed. To get the weighted average, the WEIGHT is multiplied by the %ERROR and the product summed over all tests. The result is divided by the total weight of tests performed.	ITR	Iteration of the selected test.	TOLERANCE	Tolerance needed for pass/fail criteria.	WARM-UP TIME	Period of time for meter to stabilize prior to test execution.
1-CL (CUSTOMER LOAD)	Uses customer load where the site analyzer is measuring the voltage signal and the current signals from both the potential and the current transformers.																		
2-FL (TA)	Load box provided current of TA at PF=1.0 is used.																		
3- LL (10%TA)	Load box provided current of 10% TA at PF=1.0 is used.																		
4- PF (TA @ 0.5PF LAG)	Load box provided current of TA at PF=0.5 lagging is used.																		
PULSES	Sets the number of pulses that the test will be run. Different numbers of pulses can be set for different loading conditions.																		
WEIGHT	When the overall accuracy for the selected test is computed, a weighted average can be performed. To get the weighted average, the WEIGHT is multiplied by the %ERROR and the product summed over all tests. The result is divided by the total weight of tests performed.																		
ITR	Iteration of the selected test.																		
TOLERANCE	Tolerance needed for pass/fail criteria.																		
WARM-UP TIME	Period of time for meter to stabilize prior to test execution.																		
	<p>B. TIMED RUN TEST A timed run test is identical to an accuracy test except the minimum time for the test is set. The actual measurement still starts and ends based on the meter pulses.</p> <p>PARAMETERS</p> <table border="1"> <tr> <td>TEST DURATION</td> <td>Set the test duration.</td> </tr> <tr> <td>ITERATIONS</td> <td>Number of times the test will be repeated</td> </tr> <tr> <td>TOLERANCE</td> <td>Tolerance used for pass/fail criteria.</td> </tr> <tr> <td>WARM-UP TIME</td> <td>Time for meter to stabilize prior to test execution.</td> </tr> </table>	TEST DURATION	Set the test duration.	ITERATIONS	Number of times the test will be repeated	TOLERANCE	Tolerance used for pass/fail criteria.	WARM-UP TIME	Time for meter to stabilize prior to test execution.										
TEST DURATION	Set the test duration.																		
ITERATIONS	Number of times the test will be repeated																		
TOLERANCE	Tolerance used for pass/fail criteria.																		
WARM-UP TIME	Time for meter to stabilize prior to test execution.																		


SCREEN	DESCRIPTION										
	<p>C. TIMED REGISTER TEST</p> <p>This test prompts the user for the meter’s primary register value and runs a test for a predefined duration. Then, it prompts the user again for the meter’s primary register value. The system computes the meter’s registration using the difference of the two values.</p> <p>Note: Use caution that the accuracy of the test is not limited by the resolution of the meter readout.</p> <p>PARAMETERS</p> <table border="1"> <tr> <td>TEST DURATION</td> <td>Set the test duration.</td> </tr> <tr> <td>ITERATIONS</td> <td>Number of times the test will be repeated</td> </tr> <tr> <td>TOLERANCE</td> <td>Tolerance used for pass/fail criteria.</td> </tr> <tr> <td>WARM-UP TIME</td> <td>Time for meter to stabilize prior to test execution.</td> </tr> </table>	TEST DURATION	Set the test duration.	ITERATIONS	Number of times the test will be repeated	TOLERANCE	Tolerance used for pass/fail criteria.	WARM-UP TIME	Time for meter to stabilize prior to test execution.		
TEST DURATION	Set the test duration.										
ITERATIONS	Number of times the test will be repeated										
TOLERANCE	Tolerance used for pass/fail criteria.										
WARM-UP TIME	Time for meter to stabilize prior to test execution.										
	<p>D. DEMAND TEST</p> <p>The demand interval must be set to the same interval as the meter under test. For this test to work correctly you must be able to reset the demand register of the meter. The meter’s demand must continually show the interval demand.</p> <p>PARAMETERS</p> <table border="1"> <tr> <td>INTERVAL</td> <td>Set the interval of meter.</td> </tr> <tr> <td>SUB-INTERVAL</td> <td>Set the sub-interval for the demand test.</td> </tr> <tr> <td>ITERATIONS</td> <td>Number of times the test will be repeated</td> </tr> <tr> <td>TOLERANCE</td> <td>Tolerance needed for pass/fail criteria.</td> </tr> <tr> <td>WARM-UP TIME</td> <td>Time for meter to stabilize prior to test execution.</td> </tr> </table>	INTERVAL	Set the interval of meter.	SUB-INTERVAL	Set the sub-interval for the demand test.	ITERATIONS	Number of times the test will be repeated	TOLERANCE	Tolerance needed for pass/fail criteria.	WARM-UP TIME	Time for meter to stabilize prior to test execution.
INTERVAL	Set the interval of meter.										
SUB-INTERVAL	Set the sub-interval for the demand test.										
ITERATIONS	Number of times the test will be repeated										
TOLERANCE	Tolerance needed for pass/fail criteria.										
WARM-UP TIME	Time for meter to stabilize prior to test execution.										
	<p>E. ENERGY TEST</p> <p>The energy delivered test is similar to the timed register test. The difference is that instead of specifying the time for the test to run we specify the amount of energy to be delivered.</p> <p>PARAMETERS</p> <table border="1"> <tr> <td>ENERGY DELIVERED</td> <td>Set the amount of energy to be delivered to the meter</td> </tr> <tr> <td>WARM-UP TIME</td> <td>Time for meter to stabilize prior to test execution</td> </tr> </table>	ENERGY DELIVERED	Set the amount of energy to be delivered to the meter	WARM-UP TIME	Time for meter to stabilize prior to test execution						
ENERGY DELIVERED	Set the amount of energy to be delivered to the meter										
WARM-UP TIME	Time for meter to stabilize prior to test execution										


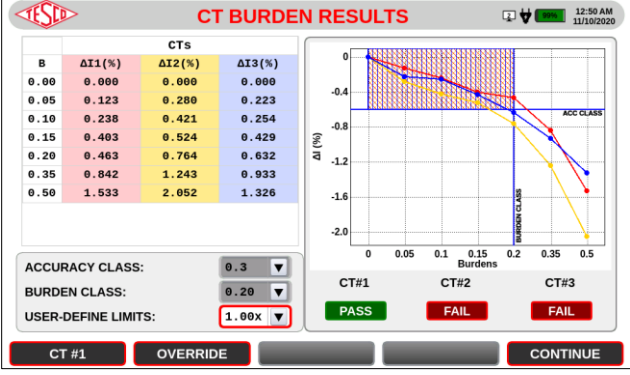
3.3.3.1b Meter Test Results

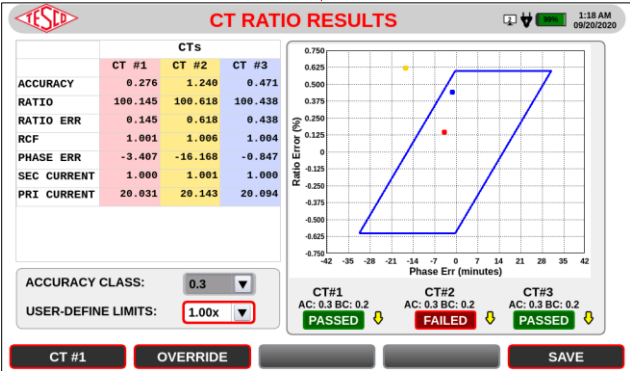
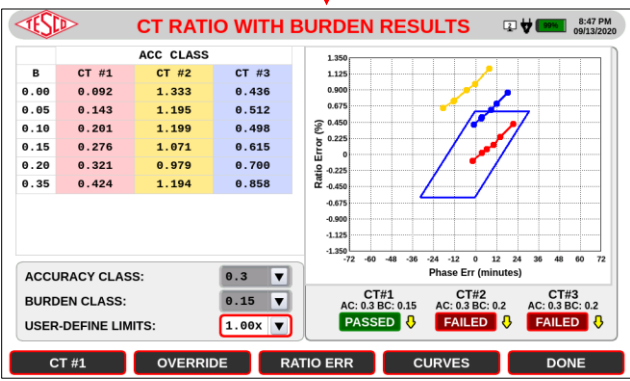
SCREEN	DESCRIPTION																											
<p style="text-align: center;">METER TEST RESULT</p> 	<p>This shows the numerical data and graphical representation of the data, after completing the test. Test results can only be saved when a site was selected.</p> <p>KEYPAD & FUNCTION KEYS</p> <table border="1" data-bbox="836 420 1469 840"> <tr><td>F1</td><td></td><td></td></tr> <tr><td>F2</td><td></td><td></td></tr> <tr><td>F3</td><td></td><td></td></tr> <tr><td>F4</td><td></td><td></td></tr> <tr><td>F5</td><td>CANCEL</td><td>Cancel the test process and return to: - MANUAL METER TEST SETUP (when performing MANUAL TEST) - TEST SEQUENCE SETUP (when performing SEQUENCE TEST)</td></tr> <tr><td></td><td>CONTINUE</td><td>Proceed to SEQUENCE SUMMARY screen.</td></tr> </table>	F1			F2			F3			F4			F5	CANCEL	Cancel the test process and return to: - MANUAL METER TEST SETUP (when performing MANUAL TEST) - TEST SEQUENCE SETUP (when performing SEQUENCE TEST)		CONTINUE	Proceed to SEQUENCE SUMMARY screen.									
F1																												
F2																												
F3																												
F4																												
F5	CANCEL	Cancel the test process and return to: - MANUAL METER TEST SETUP (when performing MANUAL TEST) - TEST SEQUENCE SETUP (when performing SEQUENCE TEST)																										
	CONTINUE	Proceed to SEQUENCE SUMMARY screen.																										
<p style="text-align: center;">TEST FINISHED</p> 	<p>METER TEST PARAMETERS</p> <table border="1" data-bbox="836 892 1469 1081"> <tr><td>TAG</td><td>Alias or brief description of the test</td></tr> <tr><td>ITERATION</td><td>Number of test iteration</td></tr> <tr><td>TEST STATUS</td><td>Status of the test</td></tr> <tr><td rowspan="3">PULSES</td><td>Preset</td><td>Pre-defined number of pulses</td></tr> <tr><td>Actual</td><td>Counted pulses during test</td></tr> <tr><td>Remaining</td><td>Remaining pulses during and after test</td></tr> </table> <p>METER TEST RESULTS</p> <table border="1" data-bbox="836 1123 1469 1312"> <tr><td>PULSES</td><td>Total pulses</td></tr> <tr><td>ACCUMULATED</td><td>Accumulated Whrs</td></tr> <tr><td>%ERROR</td><td>Measured percent error</td></tr> <tr><td>V</td><td>Measured voltage</td></tr> <tr><td>θ (V)</td><td>Measured phase angle</td></tr> <tr><td>I</td><td>Measured current</td></tr> <tr><td>θ (I)</td><td>Measured phase angle</td></tr> </table>	TAG	Alias or brief description of the test	ITERATION	Number of test iteration	TEST STATUS	Status of the test	PULSES	Preset	Pre-defined number of pulses	Actual	Counted pulses during test	Remaining	Remaining pulses during and after test	PULSES	Total pulses	ACCUMULATED	Accumulated Whrs	%ERROR	Measured percent error	V	Measured voltage	θ (V)	Measured phase angle	I	Measured current	θ (I)	Measured phase angle
TAG	Alias or brief description of the test																											
ITERATION	Number of test iteration																											
TEST STATUS	Status of the test																											
PULSES	Preset	Pre-defined number of pulses																										
	Actual	Counted pulses during test																										
	Remaining	Remaining pulses during and after test																										
PULSES	Total pulses																											
ACCUMULATED	Accumulated Whrs																											
%ERROR	Measured percent error																											
V	Measured voltage																											
θ (V)	Measured phase angle																											
I	Measured current																											
θ (I)	Measured phase angle																											
<p style="text-align: center;">SEQUENCE SUMMARY</p> 	<table border="1" data-bbox="836 1396 1469 1648"> <tr><td>F1</td><td></td><td></td></tr> <tr><td>F2</td><td></td><td></td></tr> <tr><td>F3</td><td>REDO</td><td>Redo the recently executed test.</td></tr> <tr><td>F4</td><td>REVIEW</td><td>Review the recently executed test.</td></tr> <tr><td>F5</td><td>DONE</td><td>Return to Manual Meter Test screen.</td></tr> </table>	F1			F2			F3	REDO	Redo the recently executed test.	F4	REVIEW	Review the recently executed test.	F5	DONE	Return to Manual Meter Test screen.												
F1																												
F2																												
F3	REDO	Redo the recently executed test.																										
F4	REVIEW	Review the recently executed test.																										
F5	DONE	Return to Manual Meter Test screen.																										

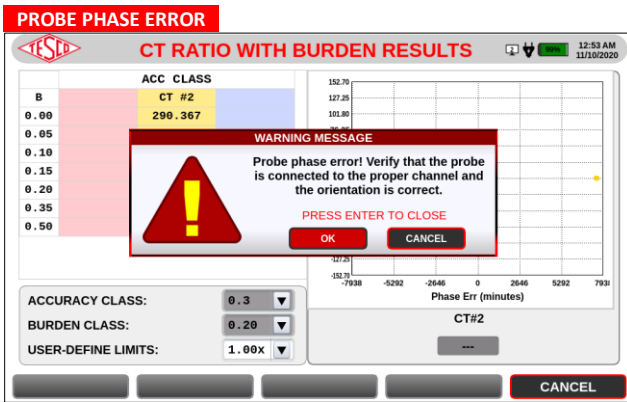
SCREEN	DESCRIPTION
<p style="text-align: center;">REDO</p> 	<p>REDO THE TEST</p> <p>This will perform the test again with the same test parameters. Press F5 to cancel the test and proceed to the sequence summary.</p>
<p style="text-align: center;">REVIEW</p> 	<p>REVIEW THE TEST</p> <p>Look back at the test that was recently performed. Press F5 to proceed to the sequence summary.</p>

3.3.3.1c CT Testing

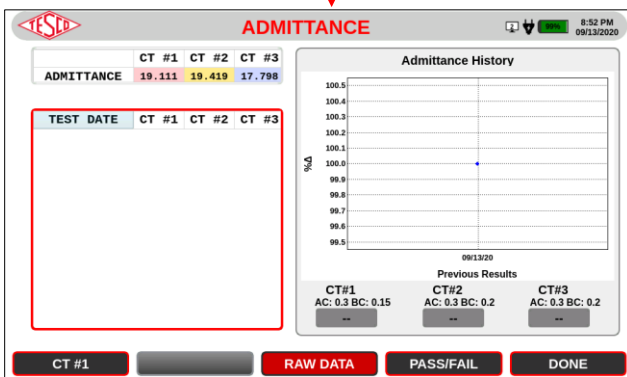
SCREEN	DESCRIPTION																																			
	<p>CT TEST MODES The CAT6330 provides a wide range of methods for testing CTs.</p> <table border="1"> <tr> <td data-bbox="836 390 1047 520">BURDEN ONLY TEST</td> <td data-bbox="1047 390 1485 520">The change in the secondary current is measured as the burden placed on the CT is increased. This test does not require a current probe, such as a Rogowski coil, connected to the primary of the transformer.</td> </tr> <tr> <td data-bbox="836 520 1047 651">RATIO ONLY TEST</td> <td data-bbox="1047 520 1485 651">Both primary and secondary currents are measured with NO additional burden added to the circuits. This test does require a current probe, such as a Rogowski coil, connected to the primary of the transformer.</td> </tr> <tr> <td data-bbox="836 651 1047 884">RATIO TEST WITH ADDED BURDEN</td> <td data-bbox="1047 651 1485 884">The Ratio with Burden test is the most accurate test of the performance of a CT. Both primary and secondary of the CT are simultaneously measured. From these measurements we can calculate many CT parameters such as accuracy class, RCF, ratio error and phase error. This test does require a current probe, such as a Rogowski coil, connected to the primary of the transformer.</td> </tr> <tr> <td data-bbox="836 884 1047 1224">ADMITTANCE</td> <td data-bbox="1047 884 1485 1224">An admittance test injects a 1,575 Hz signal into the secondary of a CT and measures the response to determine the admittance of the CT. The value you measure depends somewhat on the primary wiring and circuit characteristics. However, these effects do not generally change over time. Therefore, the real value of an admittance test is that one can do the hard job of making a Ratio with Burden test once, and then make an admittance test on the known good site. Later, one can just measure admittance to see if anything on the site has changed.</td> </tr> <tr> <td data-bbox="836 1224 1047 1251">DEMAGNETIZATION</td> <td data-bbox="1047 1224 1485 1251">Demagnetize all CTs.</td> </tr> </table> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1"> <tr> <td data-bbox="836 1304 911 1352">F1</td> <td data-bbox="911 1304 1101 1352"></td> <td data-bbox="1101 1304 1463 1352"></td> </tr> <tr> <td data-bbox="836 1352 911 1400">F2</td> <td data-bbox="911 1352 1101 1400"></td> <td data-bbox="1101 1352 1463 1400"></td> </tr> <tr> <td data-bbox="836 1400 911 1449">F3</td> <td data-bbox="911 1400 1101 1449"></td> <td data-bbox="1101 1400 1463 1449"></td> </tr> <tr> <td data-bbox="836 1449 911 1497">F4</td> <td data-bbox="911 1449 1101 1497"></td> <td data-bbox="1101 1449 1463 1497"></td> </tr> <tr> <td data-bbox="836 1497 911 1528">F5</td> <td data-bbox="911 1497 1101 1528">START</td> <td data-bbox="1101 1497 1463 1528">Start the selected test type.</td> </tr> </table> <p>Press  to return to the previous screen.</p> <p>CT PARAMETERS</p> <table border="1"> <tr> <td data-bbox="836 1633 1047 1665">NAMEPLATE RATIO</td> <td data-bbox="1047 1633 1471 1665">Nameplate ratio of the CT</td> </tr> <tr> <td data-bbox="836 1665 1047 1696">BURDEN CLASS</td> <td data-bbox="1047 1665 1471 1696">Burden class of the CT</td> </tr> <tr> <td data-bbox="836 1696 1047 1728">RATING FACTOR</td> <td data-bbox="1047 1696 1471 1728">Rating factor of the CT</td> </tr> <tr> <td data-bbox="836 1728 1047 1759">ACCURACY CLASS</td> <td data-bbox="1047 1728 1471 1759">Accuracy class of the CT</td> </tr> <tr> <td data-bbox="836 1759 1047 1791">MAX TEST BURDEN</td> <td data-bbox="1047 1759 1471 1791">Max burden allowed for the CT</td> </tr> </table>	BURDEN ONLY TEST	The change in the secondary current is measured as the burden placed on the CT is increased. This test does not require a current probe, such as a Rogowski coil, connected to the primary of the transformer.	RATIO ONLY TEST	Both primary and secondary currents are measured with NO additional burden added to the circuits. This test does require a current probe, such as a Rogowski coil, connected to the primary of the transformer.	RATIO TEST WITH ADDED BURDEN	The Ratio with Burden test is the most accurate test of the performance of a CT. Both primary and secondary of the CT are simultaneously measured. From these measurements we can calculate many CT parameters such as accuracy class, RCF, ratio error and phase error. This test does require a current probe, such as a Rogowski coil, connected to the primary of the transformer.	ADMITTANCE	An admittance test injects a 1,575 Hz signal into the secondary of a CT and measures the response to determine the admittance of the CT. The value you measure depends somewhat on the primary wiring and circuit characteristics. However, these effects do not generally change over time. Therefore, the real value of an admittance test is that one can do the hard job of making a Ratio with Burden test once, and then make an admittance test on the known good site. Later, one can just measure admittance to see if anything on the site has changed.	DEMAGNETIZATION	Demagnetize all CTs.	F1			F2			F3			F4			F5	START	Start the selected test type.	NAMEPLATE RATIO	Nameplate ratio of the CT	BURDEN CLASS	Burden class of the CT	RATING FACTOR	Rating factor of the CT	ACCURACY CLASS	Accuracy class of the CT	MAX TEST BURDEN	Max burden allowed for the CT
BURDEN ONLY TEST	The change in the secondary current is measured as the burden placed on the CT is increased. This test does not require a current probe, such as a Rogowski coil, connected to the primary of the transformer.																																			
RATIO ONLY TEST	Both primary and secondary currents are measured with NO additional burden added to the circuits. This test does require a current probe, such as a Rogowski coil, connected to the primary of the transformer.																																			
RATIO TEST WITH ADDED BURDEN	The Ratio with Burden test is the most accurate test of the performance of a CT. Both primary and secondary of the CT are simultaneously measured. From these measurements we can calculate many CT parameters such as accuracy class, RCF, ratio error and phase error. This test does require a current probe, such as a Rogowski coil, connected to the primary of the transformer.																																			
ADMITTANCE	An admittance test injects a 1,575 Hz signal into the secondary of a CT and measures the response to determine the admittance of the CT. The value you measure depends somewhat on the primary wiring and circuit characteristics. However, these effects do not generally change over time. Therefore, the real value of an admittance test is that one can do the hard job of making a Ratio with Burden test once, and then make an admittance test on the known good site. Later, one can just measure admittance to see if anything on the site has changed.																																			
DEMAGNETIZATION	Demagnetize all CTs.																																			
F1																																				
F2																																				
F3																																				
F4																																				
F5	START	Start the selected test type.																																		
NAMEPLATE RATIO	Nameplate ratio of the CT																																			
BURDEN CLASS	Burden class of the CT																																			
RATING FACTOR	Rating factor of the CT																																			
ACCURACY CLASS	Accuracy class of the CT																																			
MAX TEST BURDEN	Max burden allowed for the CT																																			

SCREEN	DESCRIPTION																																																																
<div style="text-align: center; margin-bottom: 10px;"> BURDEN ONLY  </div>  <table border="1" style="margin-top: 10px;"> <thead> <tr> <th>B</th> <th>ΔI1 (%)</th> <th>ΔI2 (%)</th> <th>ΔI3 (%)</th> </tr> </thead> <tbody> <tr><td>0.00</td><td>0.090</td><td>0.090</td><td>0.090</td></tr> <tr><td>0.05</td><td>0.123</td><td>0.280</td><td>0.223</td></tr> <tr><td>0.10</td><td>0.238</td><td>0.421</td><td>0.254</td></tr> <tr><td>0.15</td><td>0.493</td><td>0.524</td><td>0.429</td></tr> <tr><td>0.20</td><td>0.463</td><td>0.764</td><td>0.632</td></tr> <tr><td>0.35</td><td>0.842</td><td>1.243</td><td>0.933</td></tr> <tr><td>0.50</td><td>1.533</td><td>2.052</td><td>1.326</td></tr> </tbody> </table>	B	ΔI1 (%)	ΔI2 (%)	ΔI3 (%)	0.00	0.090	0.090	0.090	0.05	0.123	0.280	0.223	0.10	0.238	0.421	0.254	0.15	0.493	0.524	0.429	0.20	0.463	0.764	0.632	0.35	0.842	1.243	0.933	0.50	1.533	2.052	1.326	<p>CT TEST RESULTS</p> <p>CT test results are presented for Ratio, Burden, Ratio with Burden, and Admittance tests. Soft keys provide many ways of looking at the test data.</p> <p>Each CT test will PASS if:</p> <ul style="list-style-type: none"> Measured current falls within the specified accuracy region (in a Burden Test) or inside the parallelogram (in a Ratio Test) even at low current. <p>Each CT test will FAIL if:</p> <ul style="list-style-type: none"> Current is below minimum or above maximum current of CT. Measured current is beyond the specified accuracy region (in a Burden Test) or outside the parallelogram (in a Ratio Test). <p>CT BURDEN ONLY</p> <p>Test the CT with a certain burden. The accuracy region covers the area limited by the accuracy class and burden class.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1" style="margin-top: 10px;"> <tr> <td rowspan="4" style="text-align: center; vertical-align: middle;">F1</td> <td style="text-align: center; background-color: black; color: white;">ALL</td> <td rowspan="4">Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.</td> </tr> <tr> <td style="text-align: center; background-color: black; color: white;">CT #1</td> </tr> <tr> <td style="text-align: center; background-color: black; color: white;">CT #2</td> </tr> <tr> <td style="text-align: center; background-color: black; color: white;">CT #3</td> </tr> <tr> <td style="text-align: center; vertical-align: middle;">F2</td> <td style="text-align: center; background-color: black; color: white;">OVERRIDE</td> <td>Change the values of Accuracy Class and Burden Class.</td> </tr> <tr> <td style="text-align: center; vertical-align: middle;">F3</td> <td style="background-color: gray;"></td> <td></td> </tr> <tr> <td style="text-align: center; vertical-align: middle;">F4</td> <td style="background-color: gray;"></td> <td></td> </tr> <tr> <td style="text-align: center; vertical-align: middle;">F5</td> <td style="text-align: center; background-color: black; color: white;">CONTINUE</td> <td>Return to CT Test Setup.</td> </tr> </table> <p>DATA</p> <table border="1" style="margin-top: 10px;"> <tr> <td>B</td> <td>Burden resistance</td> </tr> <tr> <td>ΔI1</td> <td>Measured current in CT#1</td> </tr> <tr> <td>ΔI2</td> <td>Measured current in CT#2</td> </tr> <tr> <td>ΔI3</td> <td>Measured current in CT#3</td> </tr> <tr> <td>ACCURACY CLASS</td> <td>Accuracy class of CT</td> </tr> <tr> <td>BURDEN CLASS</td> <td>Burden class of CT</td> </tr> <tr> <td>USER-DEFINE LIMITS</td> <td>Extended range of accuracy class</td> </tr> </table>	F1	ALL	Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.	CT #1	CT #2	CT #3	F2	OVERRIDE	Change the values of Accuracy Class and Burden Class.	F3			F4			F5	CONTINUE	Return to CT Test Setup.	B	Burden resistance	ΔI1	Measured current in CT#1	ΔI2	Measured current in CT#2	ΔI3	Measured current in CT#3	ACCURACY CLASS	Accuracy class of CT	BURDEN CLASS	Burden class of CT	USER-DEFINE LIMITS	Extended range of accuracy class
B	ΔI1 (%)	ΔI2 (%)	ΔI3 (%)																																																														
0.00	0.090	0.090	0.090																																																														
0.05	0.123	0.280	0.223																																																														
0.10	0.238	0.421	0.254																																																														
0.15	0.493	0.524	0.429																																																														
0.20	0.463	0.764	0.632																																																														
0.35	0.842	1.243	0.933																																																														
0.50	1.533	2.052	1.326																																																														
F1	ALL	Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.																																																															
	CT #1																																																																
	CT #2																																																																
	CT #3																																																																
F2	OVERRIDE	Change the values of Accuracy Class and Burden Class.																																																															
F3																																																																	
F4																																																																	
F5	CONTINUE	Return to CT Test Setup.																																																															
B	Burden resistance																																																																
ΔI1	Measured current in CT#1																																																																
ΔI2	Measured current in CT#2																																																																
ΔI3	Measured current in CT#3																																																																
ACCURACY CLASS	Accuracy class of CT																																																																
BURDEN CLASS	Burden class of CT																																																																
USER-DEFINE LIMITS	Extended range of accuracy class																																																																

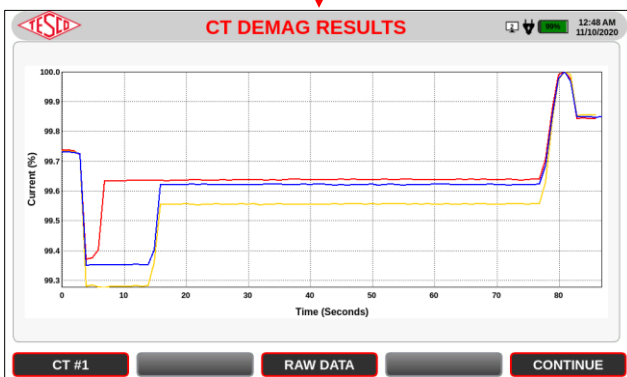
SCREEN	DESCRIPTION																																																																	
<p style="text-align: center;">RATIO ONLY</p>  <p>CT RATIO RESULTS</p> <table border="1"> <thead> <tr> <th></th> <th>CT #1</th> <th>CT #2</th> <th>CT #3</th> </tr> </thead> <tbody> <tr> <td>ACCURACY</td> <td>0.276</td> <td>1.240</td> <td>0.471</td> </tr> <tr> <td>RATIO</td> <td>100.145</td> <td>100.618</td> <td>100.438</td> </tr> <tr> <td>RATIO ERR</td> <td>0.145</td> <td>0.618</td> <td>0.438</td> </tr> <tr> <td>RCF</td> <td>1.001</td> <td>1.006</td> <td>1.004</td> </tr> <tr> <td>PHASE ERR</td> <td>-3.407</td> <td>-16.168</td> <td>-0.847</td> </tr> <tr> <td>SEC CURRENT</td> <td>1.000</td> <td>1.001</td> <td>1.000</td> </tr> <tr> <td>PRI CURRENT</td> <td>20.031</td> <td>20.143</td> <td>20.094</td> </tr> </tbody> </table> <p>ACCURACY CLASS: 0.3 USER-DEFINE LIMITS: 1.00x</p> <p>CT#1 AC: 0.3 BC: 0.2 PASSED CT#2 AC: 0.3 BC: 0.2 FAILED CT#3 AC: 0.3 BC: 0.2 PASSED</p>		CT #1	CT #2	CT #3	ACCURACY	0.276	1.240	0.471	RATIO	100.145	100.618	100.438	RATIO ERR	0.145	0.618	0.438	RCF	1.001	1.006	1.004	PHASE ERR	-3.407	-16.168	-0.847	SEC CURRENT	1.000	1.001	1.000	PRI CURRENT	20.031	20.143	20.094	<p>CT RATIO ONLY</p> <p>The ratio only test measures the complete set of CT parameters and displays them in numeric and graphical form. The data is also displayed on the IEEE accuracy parallelogram. CTs which meet the requirements of their accuracy class will be represented by points inside the parallelogram. The size of the parallelogram is adjusted appropriately based on the current through the CT.</p> <p>DATA</p> <table border="1"> <tr> <td>ACCURACY</td> <td>Measured accuracy</td> </tr> <tr> <td>RATIO</td> <td>Nameplate ratio</td> </tr> <tr> <td>RATIO ERR</td> <td>Ratio error</td> </tr> <tr> <td>RCF</td> <td>Ratio correction factor</td> </tr> <tr> <td>PHASE ERR</td> <td>Phases error</td> </tr> <tr> <td>SEC CURRENT</td> <td>Secondary current</td> </tr> <tr> <td>PRI CURRENT</td> <td>Primary current</td> </tr> <tr> <td>ACCURACY CLASS</td> <td>Accuracy class of CT</td> </tr> <tr> <td>USER-DEFINE LIMITS</td> <td>Extended range of accuracy class</td> </tr> </table> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1"> <tr> <td>F1</td> <td>ALL CT #1 CT #2 CT #3</td> <td>Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.</td> </tr> <tr> <td>F2</td> <td>OVERRIDE</td> <td>Allows the user to override the values of Accuracy Class and Burden Class provided in the setup screen.</td> </tr> <tr> <td>F3</td> <td></td> <td></td> </tr> <tr> <td>F4</td> <td></td> <td></td> </tr> <tr> <td>F5</td> <td>DONE SAVE</td> <td>Return to CT Test Setup.</td> </tr> </table>	ACCURACY	Measured accuracy	RATIO	Nameplate ratio	RATIO ERR	Ratio error	RCF	Ratio correction factor	PHASE ERR	Phases error	SEC CURRENT	Secondary current	PRI CURRENT	Primary current	ACCURACY CLASS	Accuracy class of CT	USER-DEFINE LIMITS	Extended range of accuracy class	F1	ALL CT #1 CT #2 CT #3	Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.	F2	OVERRIDE	Allows the user to override the values of Accuracy Class and Burden Class provided in the setup screen.	F3			F4			F5	DONE SAVE	Return to CT Test Setup.
	CT #1	CT #2	CT #3																																																															
ACCURACY	0.276	1.240	0.471																																																															
RATIO	100.145	100.618	100.438																																																															
RATIO ERR	0.145	0.618	0.438																																																															
RCF	1.001	1.006	1.004																																																															
PHASE ERR	-3.407	-16.168	-0.847																																																															
SEC CURRENT	1.000	1.001	1.000																																																															
PRI CURRENT	20.031	20.143	20.094																																																															
ACCURACY	Measured accuracy																																																																	
RATIO	Nameplate ratio																																																																	
RATIO ERR	Ratio error																																																																	
RCF	Ratio correction factor																																																																	
PHASE ERR	Phases error																																																																	
SEC CURRENT	Secondary current																																																																	
PRI CURRENT	Primary current																																																																	
ACCURACY CLASS	Accuracy class of CT																																																																	
USER-DEFINE LIMITS	Extended range of accuracy class																																																																	
F1	ALL CT #1 CT #2 CT #3	Shift between different display modes. Either one CT at a time or multiple CTs. Only the available CTs are shown.																																																																
F2	OVERRIDE	Allows the user to override the values of Accuracy Class and Burden Class provided in the setup screen.																																																																
F3																																																																		
F4																																																																		
F5	DONE SAVE	Return to CT Test Setup.																																																																
<p style="text-align: center;">BURDEN+RATIO</p>  <p>CT RATIO WITH BURDEN RESULTS</p> <table border="1"> <thead> <tr> <th>B</th> <th>CT #1</th> <th>CT #2</th> <th>CT #3</th> </tr> </thead> <tbody> <tr> <td>0.00</td> <td>0.092</td> <td>1.333</td> <td>0.436</td> </tr> <tr> <td>0.05</td> <td>0.143</td> <td>1.195</td> <td>0.512</td> </tr> <tr> <td>0.10</td> <td>0.201</td> <td>1.199</td> <td>0.498</td> </tr> <tr> <td>0.15</td> <td>0.276</td> <td>1.071</td> <td>0.615</td> </tr> <tr> <td>0.20</td> <td>0.321</td> <td>0.979</td> <td>0.700</td> </tr> <tr> <td>0.35</td> <td>0.424</td> <td>1.194</td> <td>0.858</td> </tr> </tbody> </table> <p>ACCURACY CLASS: 0.3 BURDEN CLASS: 0.15 USER-DEFINE LIMITS: 1.00x</p> <p>CT#1 AC: 0.3 BC: 0.15 PASSED CT#2 AC: 0.3 BC: 0.2 FAILED CT#3 AC: 0.3 BC: 0.2 FAILED</p>	B	CT #1	CT #2	CT #3	0.00	0.092	1.333	0.436	0.05	0.143	1.195	0.512	0.10	0.201	1.199	0.498	0.15	0.276	1.071	0.615	0.20	0.321	0.979	0.700	0.35	0.424	1.194	0.858	<p>CT RATIO WITH BURDEN</p> <p>This test is performed just like the burden only test except the ratio of primary to secondary current times 5 is shown.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1"> <tr> <td>F1</td> <td>ALL CT #N</td> <td>Shift between different display modes, either one CT at a time or multiple CTs. N is the number of CT, which is up to a maximum of three (3) CTs.</td> </tr> <tr> <td>F2</td> <td>OVERRIDE</td> <td>Allow overriding the values of the accuracy class and burden class selected in the setup.</td> </tr> <tr> <td>F3</td> <td>RATIO ERR</td> <td>Shift between different test results: <ul style="list-style-type: none"> Accuracy Class RCF (Ratio Correction Factor) Ratio Error Phase Error (') Ratio ΔI (%) Secondary Current Primary Current </td> </tr> <tr> <td>F4</td> <td>CURVES</td> <td>Label changes depending on what view you are in. In CURVES view, it</td> </tr> </table>	F1	ALL CT #N	Shift between different display modes, either one CT at a time or multiple CTs. N is the number of CT, which is up to a maximum of three (3) CTs.	F2	OVERRIDE	Allow overriding the values of the accuracy class and burden class selected in the setup.	F3	RATIO ERR	Shift between different test results: <ul style="list-style-type: none"> Accuracy Class RCF (Ratio Correction Factor) Ratio Error Phase Error (') Ratio ΔI (%) Secondary Current Primary Current 	F4	CURVES	Label changes depending on what view you are in. In CURVES view, it																									
B	CT #1	CT #2	CT #3																																																															
0.00	0.092	1.333	0.436																																																															
0.05	0.143	1.195	0.512																																																															
0.10	0.201	1.199	0.498																																																															
0.15	0.276	1.071	0.615																																																															
0.20	0.321	0.979	0.700																																																															
0.35	0.424	1.194	0.858																																																															
F1	ALL CT #N	Shift between different display modes, either one CT at a time or multiple CTs. N is the number of CT, which is up to a maximum of three (3) CTs.																																																																
F2	OVERRIDE	Allow overriding the values of the accuracy class and burden class selected in the setup.																																																																
F3	RATIO ERR	Shift between different test results: <ul style="list-style-type: none"> Accuracy Class RCF (Ratio Correction Factor) Ratio Error Phase Error (') Ratio ΔI (%) Secondary Current Primary Current 																																																																
F4	CURVES	Label changes depending on what view you are in. In CURVES view, it																																																																



ADMITTANCE



DEMAGNETIZATION



		shows PARALLELOGRAM and changes to PARALLELOGRAM plot when pressed.
F5	DONE	DONE or SAVE will be available depending on whether a site has been selected.
	SAVE	

DATA

B	Burden resistance
ΔI (%)	Measured current
ACCURACY CLASS	Accuracy class of CT
BURDEN CLASS	Burden class of CT
USER-DEFINE LIMITS	Extended range of accuracy class

ADMITTANCE TEST

An admittance test injects a signal into the secondary of a CT and measures the response to determine the admittance of the CT. The user can manually PASS/FAIL a CT based on the user's standard.

KEYPAD & FUNCTION KEYS

F1	ALL	Shift between different display modes, either one CT at a time or multiple CTs. N is the number of CT, which is up to a maximum of three (3) CTs.
	CT #N	
F2		
F3	RAW DATA	Show numerical/actual data.
F4	PASS/FAIL	Manually PASS/ FAIL a CT or all CTs.
F5	DONE	Return to CT Test Setup.

TEST PARAMETERS

TEST DATE	Date and time when test was performed
CT #N	Show test result of CT #N, where N is the CT number

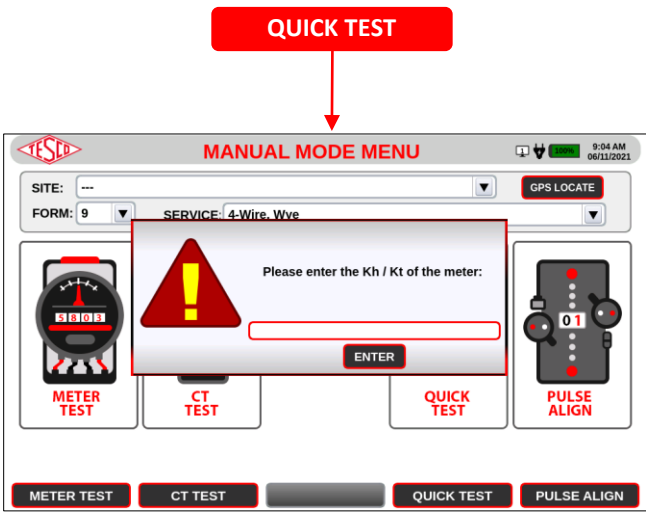



DEMAGNETIZATION TEST

Demagnetize all CTs. Current transformer demagnetization is done by gradually increasing the secondary resistance from low to high then from high to low at a consistent rate.

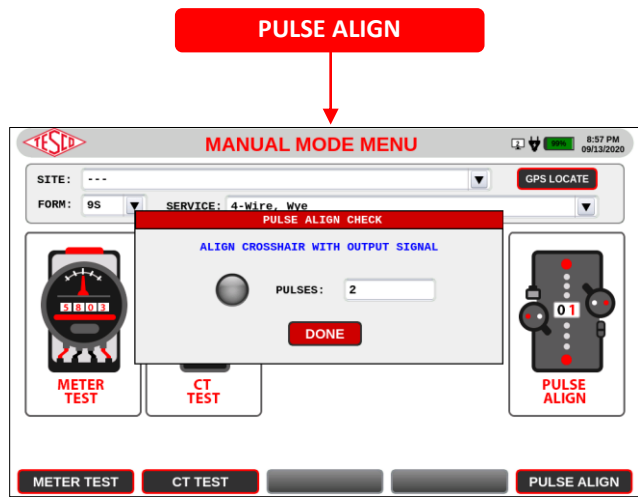



KEYPAD & FUNCTION KEYS

F1	ALL	Shift between different display modes, either one CT at a time or multiple CTs. N is the number of CT, which is up to a maximum of three (3) CTs.
	CT #N	
F2		
F3	RAW DATA	Show numerical/actual data.
F4		
F5	CONTINUE	Returns to CT TEST SETUP screen.

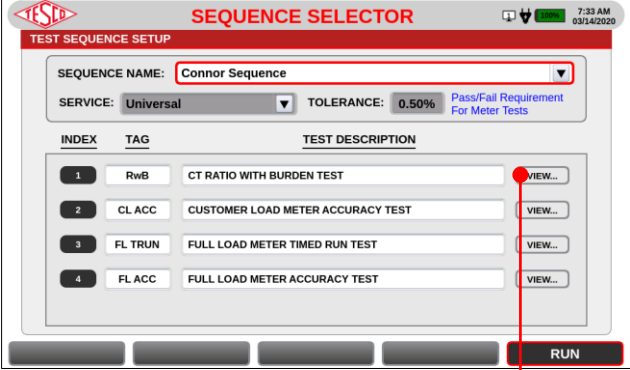
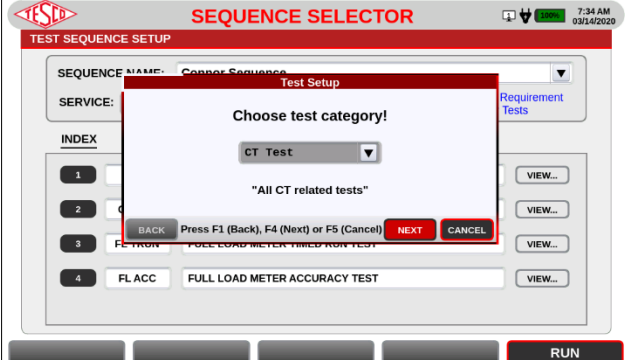
3.3.3.1d Quick Test

SCREEN	DESCRIPTION
	<p>Perform a quick test, with Full Load Accuracy Test set as the default test. Enter the Kh/Kt of the meter. Press  or  to select the , and press</p>

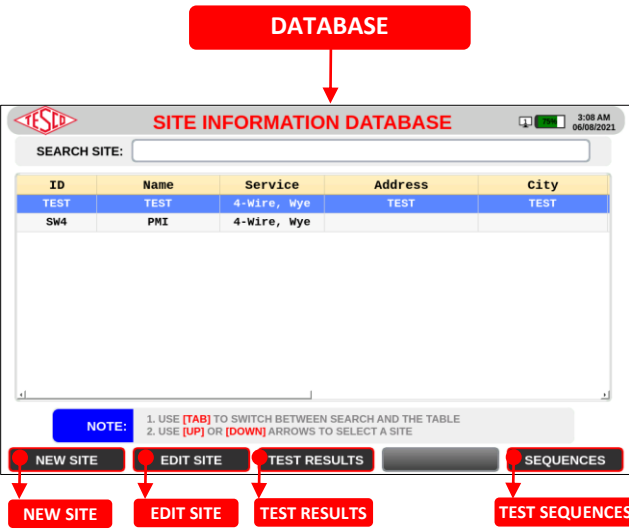

3.3.3.1e Pulse Alignment Check

SCREEN	DESCRIPTION				
	<p>This will apply voltage and current to the meter so that the optical probe can be aligned with the meter's pulse output. Before performing a pulse alignment check, make sure that the optical pickup (1037-SA) is attached to the meter.</p> <p>FUNCTION KEYS</p> <table border="1" data-bbox="844 1365 1461 1417"> <tr> <td></td> <td>Close the pop-up screen</td> </tr> </table> <p>DATA</p> <table border="1" data-bbox="844 1449 1461 1501"> <tr> <td>PULSES</td> <td>Pulse count</td> </tr> </table>		Close the pop-up screen	PULSES	Pulse count
	Close the pop-up screen				
PULSES	Pulse count				


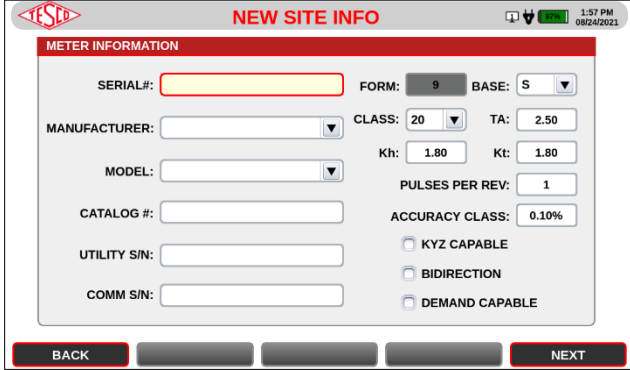


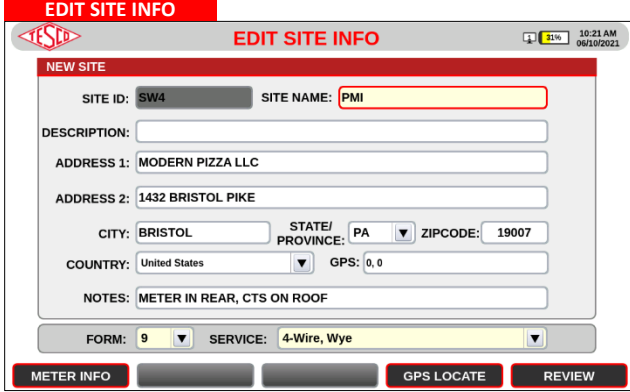
3.3.3.2 Sequence Testing

SCREEN	DESCRIPTION																													
<div style="text-align: center; margin-bottom: 10px;"> SEQUENCE TESTING </div>  <p>The screenshot shows the 'SEQUENCE SELECTOR' screen. At the top, there's a red box labeled 'SEQUENCE TESTING'. Below it, the 'TEST SEQUENCE SETUP' screen is displayed. It includes a dropdown for 'SEQUENCE NAME' (Connor Sequence), a 'SERVICE' dropdown (Universal), and a 'TOLERANCE' field (0.50%). Below these is a table with columns 'INDEX', 'TAG', and 'TEST DESCRIPTION'. The table lists four tests: 1. CT RATIO WITH BURDEN TEST, 2. CUSTOMER LOAD METER ACCURACY TEST, 3. FULL LOAD METER TIMED RUN TEST, and 4. FULL LOAD METER ACCURACY TEST. A red arrow points from the 'VIEW...' button next to the first test to the 'Test Setup' dialog box in the second screenshot.</p>  <p>The second screenshot shows the 'Test Setup' dialog box. It has a title 'Test Setup' and a dropdown menu for 'Choose test category!' with 'CT Test' selected. Below the dropdown, it says '"All CT related tests"'. At the bottom of the dialog, there are buttons for 'BACK', 'NEXT', and 'CANCEL'. A red box highlights these buttons. A red arrow points from the 'VIEW...' button in the first screenshot to this dialog box.</p>	<p>Sequence testing is performed when there is more than one type of test to execute. In this test, a sequence must be selected and</p> <p>To know how to perform a Sequence Test, proceed to section 4.3 Sequence Test.</p> <p>KEYPAD & FUNCTION KEYS</p> <table border="1" data-bbox="820 504 1453 724"> <tr> <td>F1</td> <td></td> <td></td> </tr> <tr> <td>F2</td> <td></td> <td></td> </tr> <tr> <td>F3</td> <td></td> <td></td> </tr> <tr> <td>F4</td> <td></td> <td></td> </tr> <tr> <td>F5</td> <td>RUN</td> <td>Start sequence testing.</td> </tr> </table> <p>DATA</p> <p>All data is taken from the SITE data records. A SITE must be selected before a TEST SEQUENCE can be run. All boxes on this form are read-only except SEQUENCE and the ENA fields.</p> <table border="1" data-bbox="820 882 1453 1155"> <tr> <td>SEQUENCE NAME</td> <td>Sequences available for selected meter form and service.</td> </tr> <tr> <td>TOLERANCE</td> <td>Tolerance for the pass or fail criteria.</td> </tr> <tr> <td>TA</td> <td>Test amps (RMS of a full load test).</td> </tr> <tr> <td>SERVICE</td> <td>Services/wiring configurations available for selected meter form.</td> </tr> <tr> <td>ENA</td> <td>Toggle to select or deselect a test.</td> </tr> <tr> <td>TAG</td> <td>Alias or brief description of the test.</td> </tr> <tr> <td>TEST DESCRIPTION</td> <td>Type of test available for the sequence.</td> </tr> </table>	F1			F2			F3			F4			F5	RUN	Start sequence testing.	SEQUENCE NAME	Sequences available for selected meter form and service.	TOLERANCE	Tolerance for the pass or fail criteria.	TA	Test amps (RMS of a full load test).	SERVICE	Services/wiring configurations available for selected meter form.	ENA	Toggle to select or deselect a test.	TAG	Alias or brief description of the test.	TEST DESCRIPTION	Type of test available for the sequence.
F1																														
F2																														
F3																														
F4																														
F5	RUN	Start sequence testing.																												
SEQUENCE NAME	Sequences available for selected meter form and service.																													
TOLERANCE	Tolerance for the pass or fail criteria.																													
TA	Test amps (RMS of a full load test).																													
SERVICE	Services/wiring configurations available for selected meter form.																													
ENA	Toggle to select or deselect a test.																													
TAG	Alias or brief description of the test.																													
TEST DESCRIPTION	Type of test available for the sequence.																													

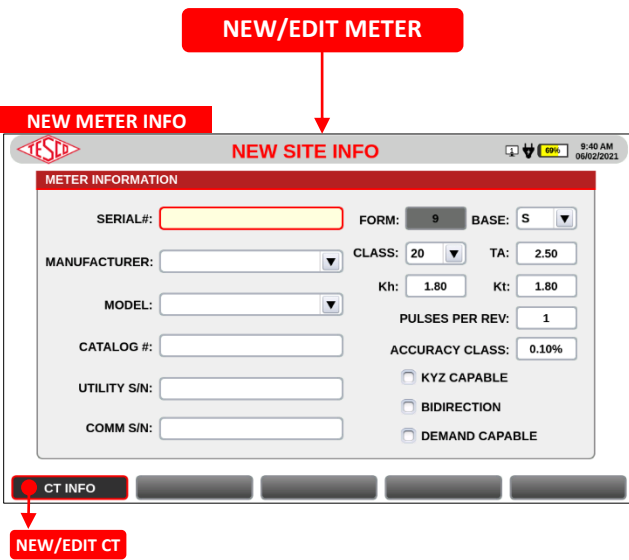
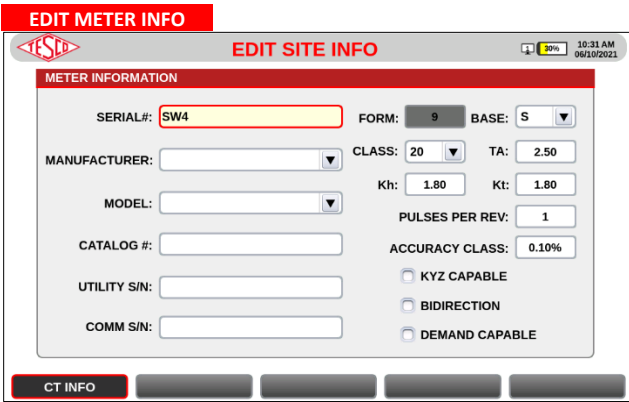

3.3.3.3 Database

SCREEN	DESCRIPTION																																											
	<p>This contains information on sites registered in the Site Analyzer. The user can create a new site and edit an existing record. Aside from the site, the user can also create and edit Meter, CT, and Customer information per site.</p> <p>The database also shows test results from Meter and CT tests. Do note that these test results were able to be saved because a site was selected prior to performing the test. To edit a site or view the test results, a site must be selected first.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1" data-bbox="820 567 1437 924"> <tr> <td>F1</td> <td>NEW SITE</td> <td>Create new site information. This also includes creating and editing information on site, meter, CT, and customer.</td> </tr> <tr> <td>F2</td> <td>EDIT SITE</td> <td>Edit information of a site, meter, CT, and customer. This will be enabled once a site is selected.</td> </tr> <tr> <td>F3</td> <td>TEST RESULTS</td> <td>View test results on meter and CT tests. This will be enabled once a site is selected.</td> </tr> <tr> <td>F4</td> <td></td> <td></td> </tr> <tr> <td>F5</td> <td>SEQUENCES</td> <td>View/Create/Edit test sequences.</td> </tr> </table> <p>Press  to return to the previous screen.</p> <p>DATA</p> <table border="1" data-bbox="820 997 1437 1375"> <tr> <td>SEARCH SITE</td> <td>Enter characters to search for a site</td> </tr> <tr> <td>SITE ID</td> <td>ID of site</td> </tr> <tr> <td>SITE NAME</td> <td>Name of site</td> </tr> <tr> <td>DESCRIPTION</td> <td>Description about site</td> </tr> <tr> <td>CUSTOMER</td> <td>Choose customer</td> </tr> <tr> <td>ADDRESS 1</td> <td>Location of site</td> </tr> <tr> <td>ADDRESS 2</td> <td>Location of site</td> </tr> <tr> <td>CITY</td> <td>City where site is located</td> </tr> <tr> <td>STATE/PROVINCE</td> <td>State/Province where site is located</td> </tr> <tr> <td>ZIPCODE</td> <td>Zip code of the local address</td> </tr> <tr> <td>COUNTRY</td> <td>Country where site is located</td> </tr> <tr> <td>GPS</td> <td>Automatically fill in using GPS Locate</td> </tr> <tr> <td>NOTES</td> <td>Additional information about the site</td> </tr> <tr> <td>SELECTED SITE</td> <td>Displays name of the selected site to edit</td> </tr> </table>	F1	NEW SITE	Create new site information. This also includes creating and editing information on site, meter, CT, and customer.	F2	EDIT SITE	Edit information of a site, meter, CT, and customer. This will be enabled once a site is selected.	F3	TEST RESULTS	View test results on meter and CT tests. This will be enabled once a site is selected.	F4			F5	SEQUENCES	View/Create/Edit test sequences.	SEARCH SITE	Enter characters to search for a site	SITE ID	ID of site	SITE NAME	Name of site	DESCRIPTION	Description about site	CUSTOMER	Choose customer	ADDRESS 1	Location of site	ADDRESS 2	Location of site	CITY	City where site is located	STATE/PROVINCE	State/Province where site is located	ZIPCODE	Zip code of the local address	COUNTRY	Country where site is located	GPS	Automatically fill in using GPS Locate	NOTES	Additional information about the site	SELECTED SITE	Displays name of the selected site to edit
F1	NEW SITE	Create new site information. This also includes creating and editing information on site, meter, CT, and customer.																																										
F2	EDIT SITE	Edit information of a site, meter, CT, and customer. This will be enabled once a site is selected.																																										
F3	TEST RESULTS	View test results on meter and CT tests. This will be enabled once a site is selected.																																										
F4																																												
F5	SEQUENCES	View/Create/Edit test sequences.																																										
SEARCH SITE	Enter characters to search for a site																																											
SITE ID	ID of site																																											
SITE NAME	Name of site																																											
DESCRIPTION	Description about site																																											
CUSTOMER	Choose customer																																											
ADDRESS 1	Location of site																																											
ADDRESS 2	Location of site																																											
CITY	City where site is located																																											
STATE/PROVINCE	State/Province where site is located																																											
ZIPCODE	Zip code of the local address																																											
COUNTRY	Country where site is located																																											
GPS	Automatically fill in using GPS Locate																																											
NOTES	Additional information about the site																																											
SELECTED SITE	Displays name of the selected site to edit																																											

3.3.3.3a Add/Edit Site

SCREEN	DESCRIPTION																														
 	<p>NEW/EDIT SITE Create new site information. Fill out the information and save it in the database. If the site info is for editing, the fields will be filled with pre-saved information of that site and the user can make changes.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1" data-bbox="836 468 1463 730"> <tr><td>F1</td><td></td><td></td></tr> <tr><td>F2</td><td></td><td></td></tr> <tr><td>F3</td><td></td><td></td></tr> <tr><td>F4</td><td>GPS LOCATE</td><td>Obtain GPS coordinates of the Site Analyzer.</td></tr> <tr><td>F5</td><td>REVIEW</td><td>Review the changes made for the Site Info, Meter Info, CT Info, and Customers Info.</td></tr> </table> <p>Press  to return to the previous screen.</p> <p>REVIEW PAGE Review the edits made or the new inputs for the site, meter, CT, and customer information. After reviewing, press F5 to save the information.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1" data-bbox="836 1056 1463 1318"> <tr><td>F1</td><td>EDIT</td><td>Return to editing information on the Site, Meter, CT, and Customers.</td></tr> <tr><td>F2</td><td></td><td></td></tr> <tr><td>F3</td><td></td><td></td></tr> <tr><td>F4</td><td></td><td></td></tr> <tr><td>F5</td><td>SAVE</td><td>Save the edits made or the new inputs for the site, meter, CT, and customer information.</td></tr> </table> <p>Press  to return to the previous screen.</p>	F1			F2			F3			F4	GPS LOCATE	Obtain GPS coordinates of the Site Analyzer.	F5	REVIEW	Review the changes made for the Site Info, Meter Info, CT Info, and Customers Info.	F1	EDIT	Return to editing information on the Site, Meter, CT, and Customers.	F2			F3			F4			F5	SAVE	Save the edits made or the new inputs for the site, meter, CT, and customer information.
F1																															
F2																															
F3																															
F4	GPS LOCATE	Obtain GPS coordinates of the Site Analyzer.																													
F5	REVIEW	Review the changes made for the Site Info, Meter Info, CT Info, and Customers Info.																													
F1	EDIT	Return to editing information on the Site, Meter, CT, and Customers.																													
F2																															
F3																															
F4																															
F5	SAVE	Save the edits made or the new inputs for the site, meter, CT, and customer information.																													
	<p>DATA</p> <table border="1" data-bbox="836 1455 1463 1833"> <tr><td>SITE ID</td><td>ID of site</td></tr> <tr><td>SITE NAME</td><td>Name of site</td></tr> <tr><td>DESCRIPTION</td><td>Description about site</td></tr> <tr><td>CUSTOMER</td><td>Choose customer</td></tr> <tr><td>ADDRESS 1</td><td>Location of site</td></tr> <tr><td>ADDRESS 2</td><td>Location of site</td></tr> <tr><td>CITY</td><td>City where site is located</td></tr> <tr><td>STATE/PROVINCE</td><td>State/Province where site is located</td></tr> <tr><td>ZIPCODE</td><td>Zip code of the local address</td></tr> <tr><td>COUNTRY</td><td>Country where site is located</td></tr> <tr><td>GPS</td><td>Automatically fill in using GPS Locate</td></tr> <tr><td>NOTES</td><td>Additional information about the site</td></tr> <tr><td>FORM</td><td>Meter form associated with the site.</td></tr> <tr><td>SERVICE</td><td>Service and CT/PT configuration.</td></tr> </table> <p>Note: Highlighted data indicate required parameters.</p>	SITE ID	ID of site	SITE NAME	Name of site	DESCRIPTION	Description about site	CUSTOMER	Choose customer	ADDRESS 1	Location of site	ADDRESS 2	Location of site	CITY	City where site is located	STATE/PROVINCE	State/Province where site is located	ZIPCODE	Zip code of the local address	COUNTRY	Country where site is located	GPS	Automatically fill in using GPS Locate	NOTES	Additional information about the site	FORM	Meter form associated with the site.	SERVICE	Service and CT/PT configuration.		
SITE ID	ID of site																														
SITE NAME	Name of site																														
DESCRIPTION	Description about site																														
CUSTOMER	Choose customer																														
ADDRESS 1	Location of site																														
ADDRESS 2	Location of site																														
CITY	City where site is located																														
STATE/PROVINCE	State/Province where site is located																														
ZIPCODE	Zip code of the local address																														
COUNTRY	Country where site is located																														
GPS	Automatically fill in using GPS Locate																														
NOTES	Additional information about the site																														
FORM	Meter form associated with the site.																														
SERVICE	Service and CT/PT configuration.																														

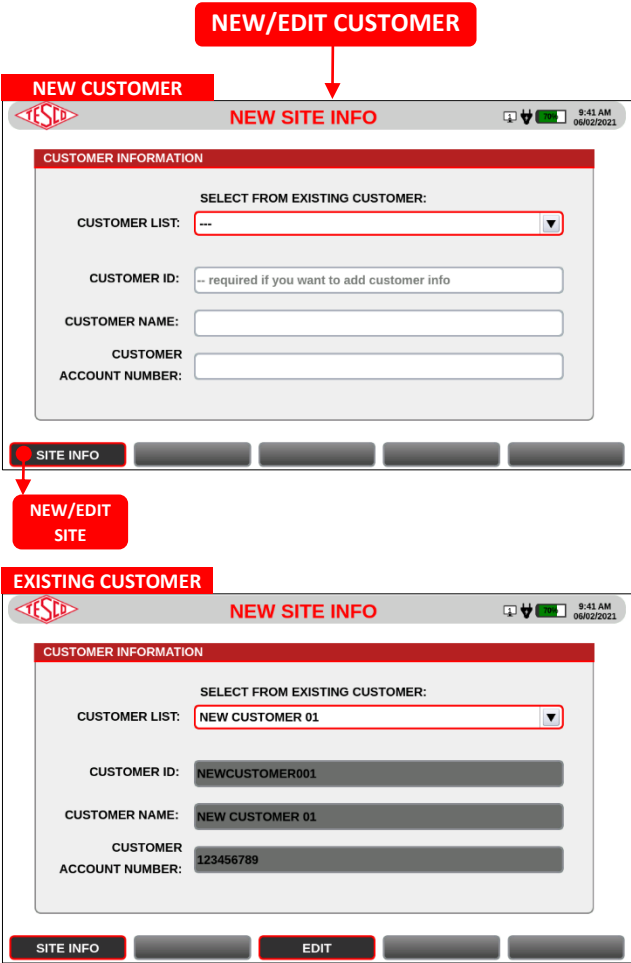
3.3.3.3b Add/Edit Meter

SCREEN	DESCRIPTION																																																	
 	<p>Create new meter information. Fill out the information and save it in the database. If the existing meter info is for editing, the fields will be filled with pre-saved information of that meter and the user can make changes.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1" data-bbox="836 430 1461 682"> <tr> <td>F1</td> <td>CT INFO</td> <td>Open the NEW CT screen to create new CT information</td> </tr> <tr> <td>F2</td> <td></td> <td></td> </tr> <tr> <td>F3</td> <td>CUSTOMER</td> <td>Open the CUSTOMERS screen to view, edit, and create customer information</td> </tr> <tr> <td>F4</td> <td></td> <td></td> </tr> <tr> <td>F5</td> <td></td> <td></td> </tr> </table> <p>Press  to return to the previous screen.</p> <p>DATA</p> <table border="1" data-bbox="836 798 1453 1522"> <thead> <tr> <th>SERIAL #</th> <td>Serial number of the meter</td> </tr> </thead> <tbody> <tr> <td>MANUFACTURER</td> <td>Manufacturer's name</td> </tr> <tr> <td>MODEL</td> <td>Model number of the meter</td> </tr> <tr> <td>CATALOG #</td> <td>Catalog # of the meter</td> </tr> <tr> <td>UTILITY S/N</td> <td>Serial number provided by Utility (if applicable)</td> </tr> <tr> <td>COMM S/N</td> <td>Serial number of communication device (if applicable)</td> </tr> <tr> <td>FORM</td> <td>Form number of the meter (auto-populates the default Kh in the Kh field)</td> </tr> <tr> <td>BASE</td> <td>Meter base (S, K, A, etc...)</td> </tr> <tr> <td>CLASS</td> <td>Meter class (determines maximum current and auto-populates the default test amps in TA field)</td> </tr> <tr> <td>TA</td> <td>Test Amps (RMS of a full load test)</td> </tr> <tr> <td>Kh</td> <td>Meter Constant (Watt hours per revolution of disk)</td> </tr> <tr> <td>Kt</td> <td>Meter Test Constant (Watt hours per pulse) Kt = Kh / Pulses per revolution</td> </tr> <tr> <td>PULSES PER REV</td> <td>Number of pulses in every revolution of the disk. Integer >= 1</td> </tr> <tr> <td>ACCURACY CLASS</td> <td>Accuracy class of the meter</td> </tr> <tr> <td>KYZ CAPABLE</td> <td>Select if meter has KYZ functionality</td> </tr> <tr> <td>BIDIRECTION</td> <td>Select if meter has bidirectionality functionality</td> </tr> <tr> <td>DEMAND CAPABLE</td> <td>Select if meter is capable of demand testing</td> </tr> </tbody> </table> <p>Note: Highlighted data indicate required parameters.</p>	F1	CT INFO	Open the NEW CT screen to create new CT information	F2			F3	CUSTOMER	Open the CUSTOMERS screen to view, edit, and create customer information	F4			F5			SERIAL #	Serial number of the meter	MANUFACTURER	Manufacturer's name	MODEL	Model number of the meter	CATALOG #	Catalog # of the meter	UTILITY S/N	Serial number provided by Utility (if applicable)	COMM S/N	Serial number of communication device (if applicable)	FORM	Form number of the meter (auto-populates the default Kh in the Kh field)	BASE	Meter base (S, K, A, etc...)	CLASS	Meter class (determines maximum current and auto-populates the default test amps in TA field)	TA	Test Amps (RMS of a full load test)	Kh	Meter Constant (Watt hours per revolution of disk)	Kt	Meter Test Constant (Watt hours per pulse) Kt = Kh / Pulses per revolution	PULSES PER REV	Number of pulses in every revolution of the disk. Integer >= 1	ACCURACY CLASS	Accuracy class of the meter	KYZ CAPABLE	Select if meter has KYZ functionality	BIDIRECTION	Select if meter has bidirectionality functionality	DEMAND CAPABLE	Select if meter is capable of demand testing
F1	CT INFO	Open the NEW CT screen to create new CT information																																																
F2																																																		
F3	CUSTOMER	Open the CUSTOMERS screen to view, edit, and create customer information																																																
F4																																																		
F5																																																		
SERIAL #	Serial number of the meter																																																	
MANUFACTURER	Manufacturer's name																																																	
MODEL	Model number of the meter																																																	
CATALOG #	Catalog # of the meter																																																	
UTILITY S/N	Serial number provided by Utility (if applicable)																																																	
COMM S/N	Serial number of communication device (if applicable)																																																	
FORM	Form number of the meter (auto-populates the default Kh in the Kh field)																																																	
BASE	Meter base (S, K, A, etc...)																																																	
CLASS	Meter class (determines maximum current and auto-populates the default test amps in TA field)																																																	
TA	Test Amps (RMS of a full load test)																																																	
Kh	Meter Constant (Watt hours per revolution of disk)																																																	
Kt	Meter Test Constant (Watt hours per pulse) Kt = Kh / Pulses per revolution																																																	
PULSES PER REV	Number of pulses in every revolution of the disk. Integer >= 1																																																	
ACCURACY CLASS	Accuracy class of the meter																																																	
KYZ CAPABLE	Select if meter has KYZ functionality																																																	
BIDIRECTION	Select if meter has bidirectionality functionality																																																	
DEMAND CAPABLE	Select if meter is capable of demand testing																																																	

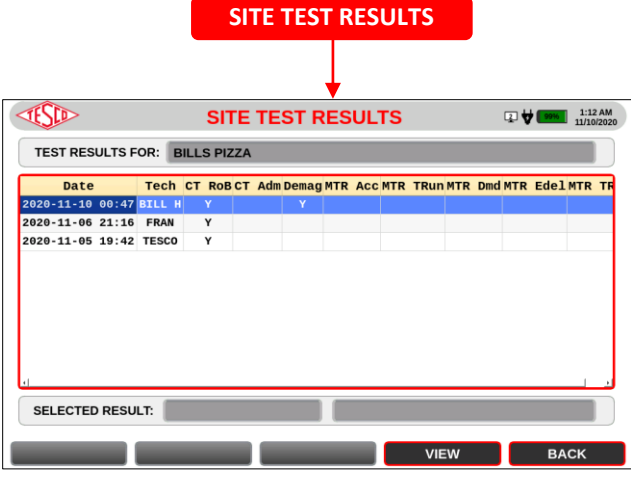
3.3.3.3c Add/Edit CT

SCREEN	DESCRIPTION																															
<div style="text-align: center; margin-bottom: 20px;"> <p>NEW/EDIT CT</p> <p>↓</p> </div> <div style="margin-bottom: 20px;"> <p>NEW CT</p> </div> <div> <p>EDIT CT</p> </div>	<p>NEW CT</p> <p>Create new CT information. Fill out and save it in the database. A maximum of three (3) CTs can be added at a time. If the existing CT info is for editing, the fields will be filled with pre-saved information of that CT and the user can make changes and save them.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center; width: 50px;">F1</td> <td style="text-align: center; width: 150px;">CUSTOMER INFO</td> <td>View/Edit existing customers and add new entries.</td> </tr> <tr> <td style="text-align: center;">F2</td> <td style="text-align: center;">COPY 1 TO ALL</td> <td>Copy information (except serial number) from CT #1 to other CTs.</td> </tr> <tr> <td style="text-align: center;">F3</td> <td style="text-align: center;">[Grey Box]</td> <td></td> </tr> <tr> <td style="text-align: center;">F4</td> <td style="text-align: center;">[Grey Box]</td> <td></td> </tr> <tr> <td style="text-align: center;">F5</td> <td style="text-align: center;">[Grey Box]</td> <td></td> </tr> </table> <p>Press to return to the previous screen.</p> <p>DATA</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left; width: 20%;">SERIAL NO</th> <th>Serial number of the meter</th> </tr> </thead> <tbody> <tr> <td>MANUFACTURER</td> <td>Manufacturer's name</td> </tr> <tr> <td>MODEL</td> <td>Model number of the meter</td> </tr> <tr> <td>BURDEN RATING</td> <td>Burden rating of the CT</td> </tr> <tr> <td>NAMEPLATE RATIO</td> <td>Ratio of primary to secondary current</td> </tr> <tr> <td>RATING FACTOR</td> <td>Rating factor of the CT</td> </tr> <tr> <td>ACCURACY CLASS</td> <td>Accuracy class of the CT</td> </tr> <tr> <td>MAX TEST BURDEN</td> <td>Maximum amount of burden</td> </tr> </tbody> </table> <p>Note: Highlighted data indicate required parameters.</p>	F1	CUSTOMER INFO	View/Edit existing customers and add new entries.	F2	COPY 1 TO ALL	Copy information (except serial number) from CT #1 to other CTs.	F3	[Grey Box]		F4	[Grey Box]		F5	[Grey Box]		SERIAL NO	Serial number of the meter	MANUFACTURER	Manufacturer's name	MODEL	Model number of the meter	BURDEN RATING	Burden rating of the CT	NAMEPLATE RATIO	Ratio of primary to secondary current	RATING FACTOR	Rating factor of the CT	ACCURACY CLASS	Accuracy class of the CT	MAX TEST BURDEN	Maximum amount of burden
F1	CUSTOMER INFO	View/Edit existing customers and add new entries.																														
F2	COPY 1 TO ALL	Copy information (except serial number) from CT #1 to other CTs.																														
F3	[Grey Box]																															
F4	[Grey Box]																															
F5	[Grey Box]																															
SERIAL NO	Serial number of the meter																															
MANUFACTURER	Manufacturer's name																															
MODEL	Model number of the meter																															
BURDEN RATING	Burden rating of the CT																															
NAMEPLATE RATIO	Ratio of primary to secondary current																															
RATING FACTOR	Rating factor of the CT																															
ACCURACY CLASS	Accuracy class of the CT																															
MAX TEST BURDEN	Maximum amount of burden																															

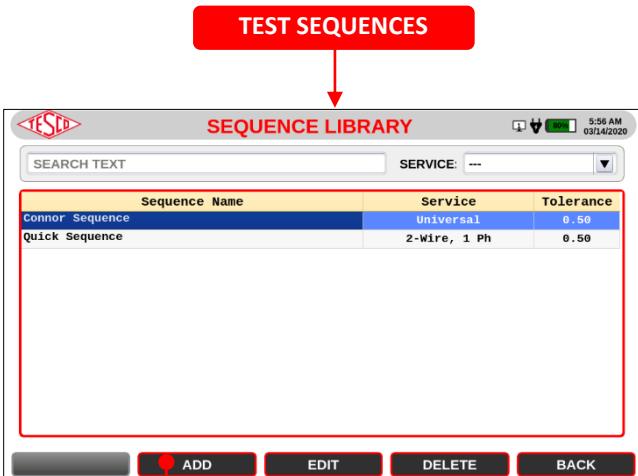

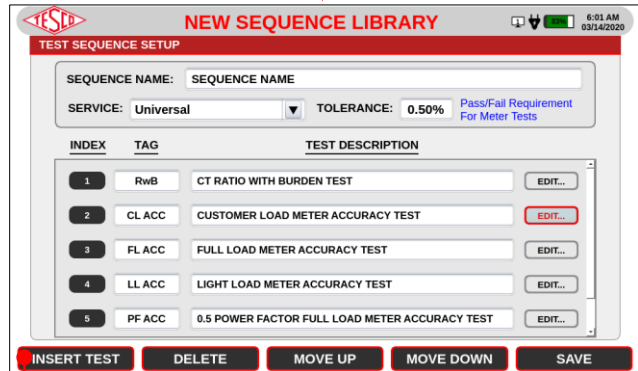




3.3.3.3d New/Edit Customer

SCREEN	DESCRIPTION																							
	<p>Create new customer information. Fill out the information and save it in the database. If the customer info is for editing, the fields will be filled with pre-saved information of that customer and the user can make changes.</p> <p>To save the changes, press F1 to return to the New or Edit Site Info page and press</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1"> <tr> <td>F1</td> <td>SITE INFO</td> <td>Return to the New or Edit Site Info page.</td> </tr> <tr> <td>F2</td> <td></td> <td></td> </tr> <tr> <td>F3</td> <td></td> <td></td> </tr> <tr> <td>F4</td> <td>EDIT</td> <td>Edit existing customer information. Information that are grayed out will be enabled for editing.</td> </tr> <tr> <td>F5</td> <td></td> <td></td> </tr> </table> <p>Press ← to return to the previous screen.</p> <p>DATA</p> <table border="1"> <tr> <td>CUSTOMER LIST</td> <td>List of existing customers</td> </tr> <tr> <td>CUSTOMER ID</td> <td>ID of customer. This is required if the user wants to add customer information.</td> </tr> <tr> <td>CUSTOMER NAME</td> <td>Name of customer</td> </tr> <tr> <td>CUSTOMER ACCOUNT NUMBER</td> <td>Account number of customers</td> </tr> </table>	F1	SITE INFO	Return to the New or Edit Site Info page.	F2			F3			F4	EDIT	Edit existing customer information. Information that are grayed out will be enabled for editing.	F5			CUSTOMER LIST	List of existing customers	CUSTOMER ID	ID of customer. This is required if the user wants to add customer information.	CUSTOMER NAME	Name of customer	CUSTOMER ACCOUNT NUMBER	Account number of customers
F1	SITE INFO	Return to the New or Edit Site Info page.																						
F2																								
F3																								
F4	EDIT	Edit existing customer information. Information that are grayed out will be enabled for editing.																						
F5																								
CUSTOMER LIST	List of existing customers																							
CUSTOMER ID	ID of customer. This is required if the user wants to add customer information.																							
CUSTOMER NAME	Name of customer																							
CUSTOMER ACCOUNT NUMBER	Account number of customers																							

3.3.3.3e Test Results

SCREEN	DESCRIPTION															
	<p>All of the test results for the selected site are displayed and organized by test session. The display indicates which test types are included in a particular test session. Use the ▲ and ▼ buttons to scroll to a site and press ENTER to select. Press VIEW to view the data in summary form.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1"> <tr> <td>F1</td> <td></td> <td></td> </tr> <tr> <td>F2</td> <td></td> <td></td> </tr> <tr> <td>F3</td> <td></td> <td></td> </tr> <tr> <td>F4</td> <td>VIEW</td> <td>View details of selected test result.</td> </tr> <tr> <td>F5</td> <td>BACK</td> <td>Return to the SITE INFORMATION DATABASE screen.</td> </tr> </table> <p>Press ← to return to the previous screen.</p>	F1			F2			F3			F4	VIEW	View details of selected test result.	F5	BACK	Return to the SITE INFORMATION DATABASE screen.
F1																
F2																
F3																
F4	VIEW	View details of selected test result.														
F5	BACK	Return to the SITE INFORMATION DATABASE screen.														

3.3.3.3f Add/Edit Sequences

SCREEN	DESCRIPTION																																	
 <p>TEST SEQUENCES</p> <p>SEQUENCE LIBRARY</p> <table border="1"> <thead> <tr> <th>Sequence Name</th> <th>Service</th> <th>Tolerance</th> </tr> </thead> <tbody> <tr> <td>Concor Sequence</td> <td>Universal</td> <td>0.50</td> </tr> <tr> <td>Quick Sequence</td> <td>2-Wire, 1 Ph</td> <td>0.50</td> </tr> </tbody> </table> <p>ADD EDIT DELETE BACK</p>	Sequence Name	Service	Tolerance	Concor Sequence	Universal	0.50	Quick Sequence	2-Wire, 1 Ph	0.50	<p>Add, edit, and delete test sequences. This allows the user a certain level of customization in the sequence. In adding or editing a test sequence, the user can re-arrange the tests with the MOVE DOWN and MOVE UP buttons.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1"> <tr> <td>F1</td> <td></td> <td></td> </tr> <tr> <td>F2</td> <td>ADD</td> <td>Add new test sequence.</td> </tr> <tr> <td>F3</td> <td>EDIT</td> <td>Edit a test sequence.</td> </tr> <tr> <td>F4</td> <td>DELETE</td> <td>Delete a test sequence.</td> </tr> <tr> <td>F5</td> <td>BACK</td> <td>Return to previous screen.</td> </tr> </table> <p>Press  to return to the previous screen.</p>	F1			F2	ADD	Add new test sequence.	F3	EDIT	Edit a test sequence.	F4	DELETE	Delete a test sequence.	F5	BACK	Return to previous screen.									
Sequence Name	Service	Tolerance																																
Concor Sequence	Universal	0.50																																
Quick Sequence	2-Wire, 1 Ph	0.50																																
F1																																		
F2	ADD	Add new test sequence.																																
F3	EDIT	Edit a test sequence.																																
F4	DELETE	Delete a test sequence.																																
F5	BACK	Return to previous screen.																																
 <p>NEW SEQUENCE LIBRARY</p> <p>TEST SEQUENCE SETUP</p> <p>SEQUENCE NAME: SEQUENCE NAME</p> <p>SERVICE: Universal TOLERANCE: 0.50% <small>Pass/Fail Requirement For Meter Tests</small></p> <table border="1"> <thead> <tr> <th>INDEX</th> <th>TAG</th> <th>TEST DESCRIPTION</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>RwB</td> <td>CT RATIO WITH BURDEN TEST</td> </tr> <tr> <td>2</td> <td>CL ACC</td> <td>CUSTOMER LOAD METER ACCURACY TEST</td> </tr> <tr> <td>3</td> <td>FL ACC</td> <td>FULL LOAD METER ACCURACY TEST</td> </tr> <tr> <td>4</td> <td>LL ACC</td> <td>LIGHT LOAD METER ACCURACY TEST</td> </tr> <tr> <td>5</td> <td>PF ACC</td> <td>0.5 POWER FACTOR FULL LOAD METER ACCURACY TEST</td> </tr> </tbody> </table> <p>INSERT TEST DELETE MOVE UP MOVE DOWN SAVE</p>	INDEX	TAG	TEST DESCRIPTION	1	RwB	CT RATIO WITH BURDEN TEST	2	CL ACC	CUSTOMER LOAD METER ACCURACY TEST	3	FL ACC	FULL LOAD METER ACCURACY TEST	4	LL ACC	LIGHT LOAD METER ACCURACY TEST	5	PF ACC	0.5 POWER FACTOR FULL LOAD METER ACCURACY TEST	<p>ADD NEW SEQUENCE</p> <p>To add or insert a new test in the sequence, press  until the table of the sequences is selected. Once the table is selected, press  to insert a test. This will lead to a series of popups that will act as a guide to set up the sequence.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1"> <tr> <td>F1</td> <td>INSERT TEST</td> <td>Insert a new test in the sequence.</td> </tr> <tr> <td>F2</td> <td>DELETE</td> <td>Delete the selected test.</td> </tr> <tr> <td>F3</td> <td>MOVE UP</td> <td>Move up the</td> </tr> <tr> <td>F4</td> <td>MOVE DOWN</td> <td>Delete a test sequence.</td> </tr> <tr> <td>F5</td> <td>SAVE</td> <td>Return to previous screen.</td> </tr> </table>	F1	INSERT TEST	Insert a new test in the sequence.	F2	DELETE	Delete the selected test.	F3	MOVE UP	Move up the	F4	MOVE DOWN	Delete a test sequence.	F5	SAVE	Return to previous screen.
INDEX	TAG	TEST DESCRIPTION																																
1	RwB	CT RATIO WITH BURDEN TEST																																
2	CL ACC	CUSTOMER LOAD METER ACCURACY TEST																																
3	FL ACC	FULL LOAD METER ACCURACY TEST																																
4	LL ACC	LIGHT LOAD METER ACCURACY TEST																																
5	PF ACC	0.5 POWER FACTOR FULL LOAD METER ACCURACY TEST																																
F1	INSERT TEST	Insert a new test in the sequence.																																
F2	DELETE	Delete the selected test.																																
F3	MOVE UP	Move up the																																
F4	MOVE DOWN	Delete a test sequence.																																
F5	SAVE	Return to previous screen.																																
 <p>NEW SEQUENCE LIBRARY</p> <p>TEST SEQUENCE SETUP</p> <p>SEQUENCE NAME: SEQUENCE NAME</p> <p>SERVICE: Universal</p> <p>Test Setup</p> <p>Choose test category!</p> <p>Meter Test</p> <p>"All meter related tests"</p> <p>BACK Press F1 (Back), F4 (Next) or F5 (Cancel) NEXT CANCEL</p> <p>INSERT TEST DELETE MOVE UP MOVE DOWN SAVE</p>	<p>Press  to return to the previous screen.</p>																																	

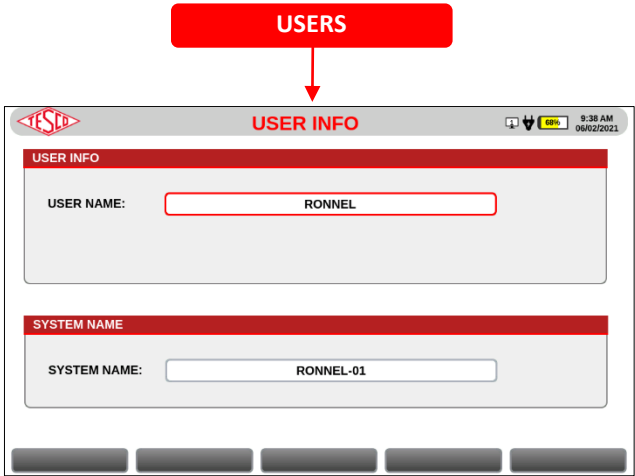
3.3.3.4 Settings

SCREEN	DESCRIPTION															
	<p>Change or update the options and settings for the site analyzer.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1"> <tr> <td>F1</td> <td>GENERAL</td> <td>Adjust screen brightness options and select method of assigning IP address.</td> </tr> <tr> <td>F2</td> <td>USERS</td> <td>View name of user or technician.</td> </tr> <tr> <td>F3</td> <td>COLORS/BEEPER</td> <td>Change phase color assignments.</td> </tr> <tr> <td>F4</td> <td>TESTING</td> <td>Set global testing options.</td> </tr> <tr> <td>F5</td> <td></td> <td></td> </tr> </table> <p>Press to return to the previous screen.</p>	F1	GENERAL	Adjust screen brightness options and select method of assigning IP address.	F2	USERS	View name of user or technician.	F3	COLORS/BEEPER	Change phase color assignments.	F4	TESTING	Set global testing options.	F5		
F1	GENERAL	Adjust screen brightness options and select method of assigning IP address.														
F2	USERS	View name of user or technician.														
F3	COLORS/BEEPER	Change phase color assignments.														
F4	TESTING	Set global testing options.														
F5																

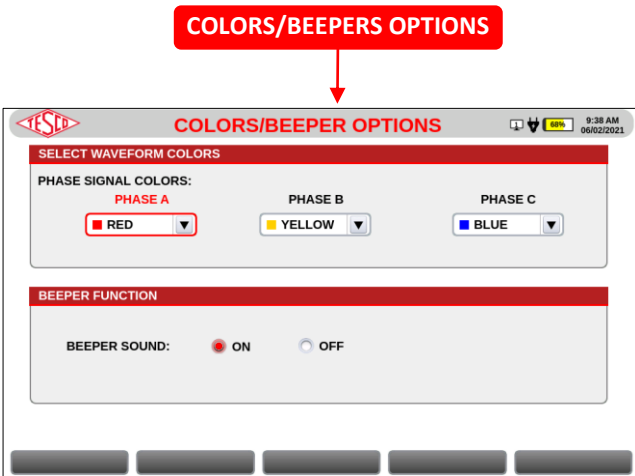

3.3.3.4a General Options

SCREEN	DESCRIPTION																									
	<p>Set the brightness level of the screen. The user can also select the auto-adjust option where the brightness level will be automatically adjusted according to the ambient light in the surroundings.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1"> <tr> <td>F1</td> <td>NETWORK</td> <td>Shows a pop-up that allows changing the network settings.</td> </tr> <tr> <td>F2</td> <td></td> <td></td> </tr> <tr> <td>F3</td> <td></td> <td></td> </tr> <tr> <td>F4</td> <td></td> <td></td> </tr> <tr> <td>F5</td> <td></td> <td></td> </tr> </table> <p>DATA</p> <table border="1"> <tr> <td rowspan="2">BRIGHTNESS LEVEL</td> <td colspan="2">Manually set the brightness level of the screen. The user can choose to auto-adjust the brightness level or set a certain level for it.</td> </tr> <tr> <td>TIMEZONE</td> <td>Select a timezone for the site analyzer. The time and date are automatically updated once a timezone is selected.</td> </tr> <tr> <td rowspan="2">IP ADDRESS</td> <td>DHCP</td> <td>Select for IP address assigned by the network</td> </tr> <tr> <td>STATIC</td> <td>Select for IP address specified by the user</td> </tr> </table> <p>Press to return to the previous screen.</p>	F1	NETWORK	Shows a pop-up that allows changing the network settings.	F2			F3			F4			F5			BRIGHTNESS LEVEL	Manually set the brightness level of the screen. The user can choose to auto-adjust the brightness level or set a certain level for it.		TIMEZONE	Select a timezone for the site analyzer. The time and date are automatically updated once a timezone is selected.	IP ADDRESS	DHCP	Select for IP address assigned by the network	STATIC	Select for IP address specified by the user
F1	NETWORK	Shows a pop-up that allows changing the network settings.																								
F2																										
F3																										
F4																										
F5																										
BRIGHTNESS LEVEL	Manually set the brightness level of the screen. The user can choose to auto-adjust the brightness level or set a certain level for it.																									
	TIMEZONE	Select a timezone for the site analyzer. The time and date are automatically updated once a timezone is selected.																								
IP ADDRESS	DHCP	Select for IP address assigned by the network																								
	STATIC	Select for IP address specified by the user																								

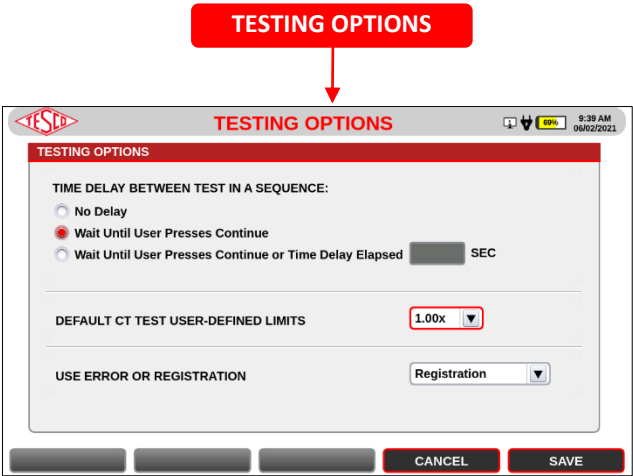

3.3.3.4b Users

SCREEN	DESCRIPTION				
	<p>Set the name of the user (or technician) and the system. The username will be shown in the main menu after bootup.</p> <p>DATA</p> <table border="1"> <tr> <td>USER NAME</td> <td>This could be the technician's name or any user for that matter.</td> </tr> <tr> <td>SYSTEM NAME</td> <td>This could be any name that the owner or user of the site analyzer will set.</td> </tr> </table>	USER NAME	This could be the technician's name or any user for that matter.	SYSTEM NAME	This could be any name that the owner or user of the site analyzer will set.
USER NAME	This could be the technician's name or any user for that matter.				
SYSTEM NAME	This could be any name that the owner or user of the site analyzer will set.				

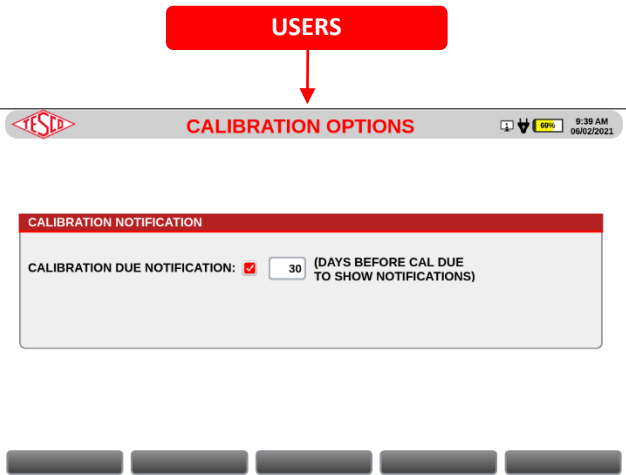
3.3.3.4c Colors/Beepers Options

SCREEN	DESCRIPTION																							
	<p>Choose colors for displaying each phase's data in the system. All phase color coding and plots are affected.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1"> <tr> <td>F1</td> <td></td> <td></td> </tr> <tr> <td>F2</td> <td></td> <td></td> </tr> <tr> <td>F3</td> <td></td> <td></td> </tr> <tr> <td>F4</td> <td></td> <td></td> </tr> <tr> <td>F5</td> <td>SAVE</td> <td>This is enabled/shown when there are changes in the options. This saves the changes made.</td> </tr> </table> <p>Press  to return to the previous screen.</p> <p>DATA</p> <table border="1"> <tr> <td>PHASE SIGNAL COLORS</td> <td colspan="2">Choose signal colors for Phase A, B, and C.</td> </tr> <tr> <td rowspan="2">BEEPER SOUND</td> <td>ON</td> <td>Select to turn on beeper sound</td> </tr> <tr> <td>OFF</td> <td>Select to turn off beeper sound</td> </tr> </table>	F1			F2			F3			F4			F5	SAVE	This is enabled/shown when there are changes in the options. This saves the changes made.	PHASE SIGNAL COLORS	Choose signal colors for Phase A, B, and C.		BEEPER SOUND	ON	Select to turn on beeper sound	OFF	Select to turn off beeper sound
F1																								
F2																								
F3																								
F4																								
F5	SAVE	This is enabled/shown when there are changes in the options. This saves the changes made.																						
PHASE SIGNAL COLORS	Choose signal colors for Phase A, B, and C.																							
BEEPER SOUND	ON	Select to turn on beeper sound																						
	OFF	Select to turn off beeper sound																						

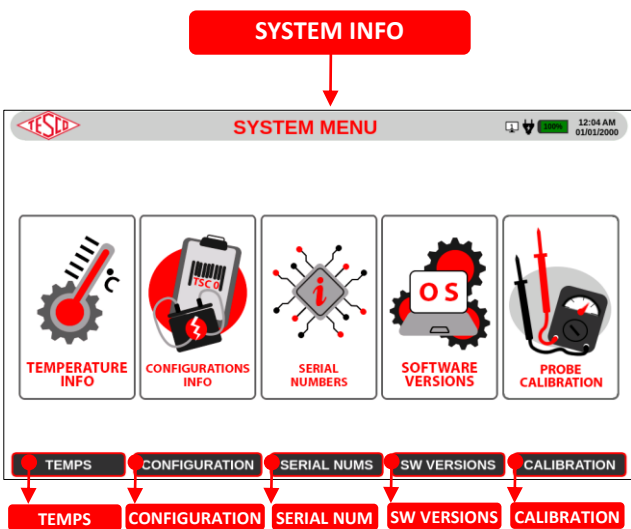

3.3.3.4d Testing Options

SCREEN	DESCRIPTION																			
	<p>Set an option whether to define a delay between tests in a sequence; wait until a user presses continue; or have no delay at all and have the succeeding tests execute immediately. The user can also set the default defined limits for CT testing.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1" data-bbox="816 506 1443 789"> <tr> <td>F1</td> <td></td> <td></td> </tr> <tr> <td>F2</td> <td></td> <td></td> </tr> <tr> <td>F3</td> <td></td> <td></td> </tr> <tr> <td>F4</td> <td>CANCEL</td> <td>This is enabled/shown when there are changes in the options. This cancels the changes made.</td> </tr> <tr> <td>F5</td> <td>SAVE</td> <td>This is enabled/shown when there are changes in the options. This saves the changes made.</td> </tr> </table> <p>Press  to return to the previous screen.</p> <p>DATA</p> <table border="1" data-bbox="816 915 1443 1073"> <tr> <td>DEFAULT USER DEFINED LIMITS</td> <td>Select the default user-defined limits for all the CT tests.</td> </tr> <tr> <td>USER ERROR OR REGISTRATION</td> <td></td> </tr> </table>	F1			F2			F3			F4	CANCEL	This is enabled/shown when there are changes in the options. This cancels the changes made.	F5	SAVE	This is enabled/shown when there are changes in the options. This saves the changes made.	DEFAULT USER DEFINED LIMITS	Select the default user-defined limits for all the CT tests.	USER ERROR OR REGISTRATION	
F1																				
F2																				
F3																				
F4	CANCEL	This is enabled/shown when there are changes in the options. This cancels the changes made.																		
F5	SAVE	This is enabled/shown when there are changes in the options. This saves the changes made.																		
DEFAULT USER DEFINED LIMITS	Select the default user-defined limits for all the CT tests.																			
USER ERROR OR REGISTRATION																				

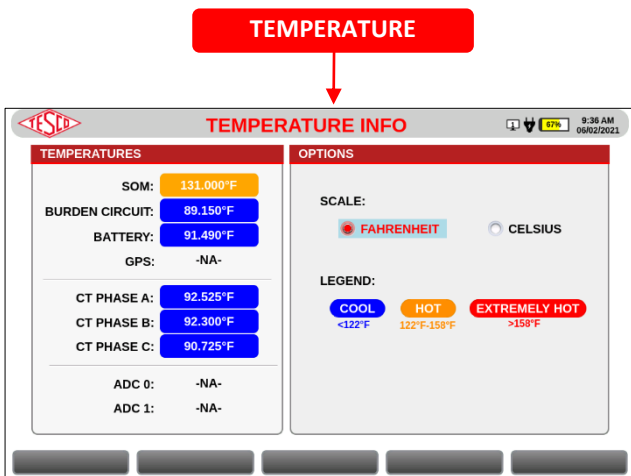

3.3.3.4e Calibration Options

SCREEN	DESCRIPTION
	<p>Enable or disable notification for calibration due. If enabled, the user can set the number of days before calibration due to show notification. Any changes in the value or setting are automatically saved.</p>

3.3.3.5 System Information

SCREEN	DESCRIPTION															
	<p>This is the menu to view information on the temperature, configurations, serial numbers, software versions, and calibration of the system.</p> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1" data-bbox="816 436 1417 722"> <tr> <td>F1</td> <td>TEMPS</td> <td>Check the temperature of the circuit, CTs, and battery.</td> </tr> <tr> <td>F2</td> <td>CONFIGURATION</td> <td>View configurations for current, frequency, thermal, and feedback settings.</td> </tr> <tr> <td>F3</td> <td>SERIAL NUMS</td> <td>View serial numbers of the system's PC boards.</td> </tr> <tr> <td>F4</td> <td>SW VERSIONS</td> <td>View detailed information on the software.</td> </tr> <tr> <td>F5</td> <td>CALIBRATION</td> <td></td> </tr> </table> <p>Press  to return to the previous screen.</p>	F1	TEMPS	Check the temperature of the circuit, CTs, and battery.	F2	CONFIGURATION	View configurations for current, frequency, thermal, and feedback settings.	F3	SERIAL NUMS	View serial numbers of the system's PC boards.	F4	SW VERSIONS	View detailed information on the software.	F5	CALIBRATION	
F1	TEMPS	Check the temperature of the circuit, CTs, and battery.														
F2	CONFIGURATION	View configurations for current, frequency, thermal, and feedback settings.														
F3	SERIAL NUMS	View serial numbers of the system's PC boards.														
F4	SW VERSIONS	View detailed information on the software.														
F5	CALIBRATION															

3.3.3.5a Temperature

SCREEN	DESCRIPTION														
	<p>View information on the temperature of the site analyzer.</p> <p>DATA</p> <table border="1" data-bbox="816 1186 1450 1350"> <tr> <td rowspan="4">TEMPERATURES</td> <td>SOM</td> <td>Temperature of SOM</td> </tr> <tr> <td>BURDEN CIRCUIT</td> <td>Temperature of burden circuit</td> </tr> <tr> <td>CT PHASE A</td> <td>Temperature of CT Phase A</td> </tr> <tr> <td>CT PHASE B</td> <td>Temperature of CT Phase B</td> </tr> </table> <table border="1" data-bbox="816 1350 1450 1455"> <tr> <td rowspan="2">SHOW EXTREME TEMP. SCREEN INDICATOR</td> <td>CT PHASE C</td> <td>Temperature of CT Phase C</td> </tr> <tr> <td colspan="2">This will enable changing the color of the temperature indicator into red when the Site Analyzer's temperature is beyond 158°F or 70°C.</td> </tr> </table> <p><i>*Default temperature is in Fahrenheit (°F).</i></p> <p>Press  to return to the previous screen.</p>	TEMPERATURES	SOM	Temperature of SOM	BURDEN CIRCUIT	Temperature of burden circuit	CT PHASE A	Temperature of CT Phase A	CT PHASE B	Temperature of CT Phase B	SHOW EXTREME TEMP. SCREEN INDICATOR	CT PHASE C	Temperature of CT Phase C	This will enable changing the color of the temperature indicator into red when the Site Analyzer's temperature is beyond 158°F or 70°C.	
TEMPERATURES	SOM		Temperature of SOM												
	BURDEN CIRCUIT		Temperature of burden circuit												
	CT PHASE A		Temperature of CT Phase A												
	CT PHASE B	Temperature of CT Phase B													
SHOW EXTREME TEMP. SCREEN INDICATOR	CT PHASE C	Temperature of CT Phase C													
	This will enable changing the color of the temperature indicator into red when the Site Analyzer's temperature is beyond 158°F or 70°C.														

3.3.3.5b Configuration

SCREEN	DESCRIPTION																						
	<p>View information on the standard and load box.</p> <p>DATA</p> <table border="1"> <tr> <td>MAX CURRENT</td> <td>Maximum current for the load box</td> </tr> <tr> <td>MIN CURRENT</td> <td>Minimum current for the load box</td> </tr> <tr> <td>MAX FREQ</td> <td>Maximum frequency for the load box</td> </tr> <tr> <td>MIN FREQ</td> <td>Minimum frequency for the load box</td> </tr> <tr> <td>THERMAL CUTOFF</td> <td>Thermal cutoff</td> </tr> <tr> <td>THERMAL RESTORE</td> <td>Thermal restore</td> </tr> <tr> <td>FB AMP COR</td> <td>Feedback amplitude correction</td> </tr> <tr> <td>FB PHASE COR</td> <td>Feedback phase correction</td> </tr> <tr> <td>MODEL</td> <td>Model number/name of the site analyzer</td> </tr> <tr> <td>SERIAL NUM</td> <td>Serial number of the site analyzer</td> </tr> <tr> <td>DATE</td> <td>Date of the latest metrology calibration on the site analyzer</td> </tr> </table> <p>Press to return to the previous screen.</p>	MAX CURRENT	Maximum current for the load box	MIN CURRENT	Minimum current for the load box	MAX FREQ	Maximum frequency for the load box	MIN FREQ	Minimum frequency for the load box	THERMAL CUTOFF	Thermal cutoff	THERMAL RESTORE	Thermal restore	FB AMP COR	Feedback amplitude correction	FB PHASE COR	Feedback phase correction	MODEL	Model number/name of the site analyzer	SERIAL NUM	Serial number of the site analyzer	DATE	Date of the latest metrology calibration on the site analyzer
MAX CURRENT	Maximum current for the load box																						
MIN CURRENT	Minimum current for the load box																						
MAX FREQ	Maximum frequency for the load box																						
MIN FREQ	Minimum frequency for the load box																						
THERMAL CUTOFF	Thermal cutoff																						
THERMAL RESTORE	Thermal restore																						
FB AMP COR	Feedback amplitude correction																						
FB PHASE COR	Feedback phase correction																						
MODEL	Model number/name of the site analyzer																						
SERIAL NUM	Serial number of the site analyzer																						
DATE	Date of the latest metrology calibration on the site analyzer																						

3.3.3.5c Serial Numbers

SCREEN	DESCRIPTION				
	<p>This contains the serial numbers of the controllers.</p> <p>DATA</p> <table border="1"> <tr> <td>PART NUMBER</td> <td>Part number of the listed boards</td> </tr> <tr> <td>SERIAL NUMBER</td> <td>Serial number of the listed boards</td> </tr> </table> <p>Press to return to the previous screen.</p>	PART NUMBER	Part number of the listed boards	SERIAL NUMBER	Serial number of the listed boards
PART NUMBER	Part number of the listed boards				
SERIAL NUMBER	Serial number of the listed boards				

3.3.3.5d Software Versions

SCREEN	DESCRIPTION														
	<p>View information on the Linux operating system.</p> <p>DATA</p> <table border="1"> <tr> <td>SOFTWARE VERSION</td> <td>Software version on the site analyzer</td> </tr> <tr> <td>LINUX KERNEL VERSION</td> <td>Linux kernel version of the software</td> </tr> <tr> <td>MAIN BOARD FPGA VERSION</td> <td>Software version of the FPGA main board</td> </tr> <tr> <td>CT BOARD FPGA VERSION</td> <td>Software version of the FPGA CT board</td> </tr> <tr> <td>DB SCHEMA VERSION</td> <td>Database version</td> </tr> <tr> <td>HW VERSION</td> <td>Hardware version</td> </tr> <tr> <td>SOM SERIAL NUMBER</td> <td>Serial number of SOM</td> </tr> </table> <p>Press to return to the previous screen.</p>	SOFTWARE VERSION	Software version on the site analyzer	LINUX KERNEL VERSION	Linux kernel version of the software	MAIN BOARD FPGA VERSION	Software version of the FPGA main board	CT BOARD FPGA VERSION	Software version of the FPGA CT board	DB SCHEMA VERSION	Database version	HW VERSION	Hardware version	SOM SERIAL NUMBER	Serial number of SOM
SOFTWARE VERSION	Software version on the site analyzer														
LINUX KERNEL VERSION	Linux kernel version of the software														
MAIN BOARD FPGA VERSION	Software version of the FPGA main board														
CT BOARD FPGA VERSION	Software version of the FPGA CT board														
DB SCHEMA VERSION	Database version														
HW VERSION	Hardware version														
SOM SERIAL NUMBER	Serial number of SOM														

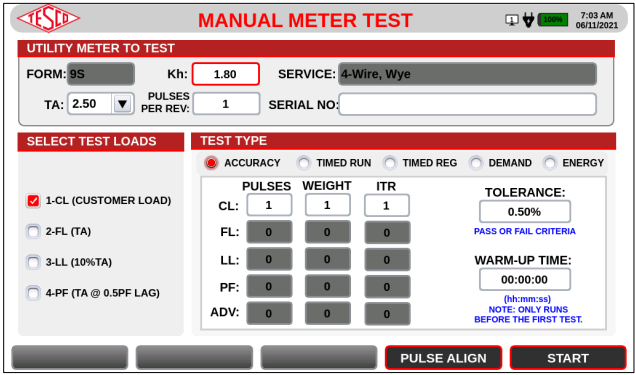
3.3.3.5e Calibration

SCREEN	DESCRIPTION																																	
	<p>View calibration details of the site analyzer. Should the site analyzer need recalibration, please contact TESCO. Contact details are found in section 1.2 Contacting TESCO.</p> <p>DATA</p> <table border="1"> <tr> <td>DATE CALIBRATED</td> <td>Date when the site analyzer was last calibrated.</td> </tr> <tr> <td>CALIBRATION DUE DATE</td> <td>Due date indicating when the site analyzer should be recalibrated.</td> </tr> </table> <p>KEYPAD & FUNCTION KEYS:</p> <table border="1"> <tr> <td>F1</td> <td>PROBE</td> <td rowspan="2">Switch between showing probe or metrology calibration details.</td> </tr> <tr> <td></td> <td>METROLOGY</td> </tr> <tr> <td>F2</td> <td></td> <td></td> </tr> <tr> <td>F3</td> <td></td> <td></td> </tr> <tr> <td>F4</td> <td></td> <td></td> </tr> <tr> <td>F5</td> <td></td> <td></td> </tr> </table> <p>Press to return to the previous screen.</p> <p>Probe Calibration Information can be obtained only if the probes are connected.</p> <p>DATA</p> <table border="1"> <tr> <td>MODEL</td> <td>Probe model</td> </tr> <tr> <td>SERIAL #</td> <td>Probe serial number</td> </tr> <tr> <td>TYPE</td> <td>Probe type</td> </tr> <tr> <td>RANGE 1</td> <td>Probe range</td> </tr> <tr> <td>RANGE 2</td> <td>Probe range</td> </tr> <tr> <td>RANGE 3</td> <td>Probe range</td> </tr> </table>	DATE CALIBRATED	Date when the site analyzer was last calibrated.	CALIBRATION DUE DATE	Due date indicating when the site analyzer should be recalibrated.	F1	PROBE	Switch between showing probe or metrology calibration details.		METROLOGY	F2			F3			F4			F5			MODEL	Probe model	SERIAL #	Probe serial number	TYPE	Probe type	RANGE 1	Probe range	RANGE 2	Probe range	RANGE 3	Probe range
DATE CALIBRATED	Date when the site analyzer was last calibrated.																																	
CALIBRATION DUE DATE	Due date indicating when the site analyzer should be recalibrated.																																	
F1	PROBE	Switch between showing probe or metrology calibration details.																																
	METROLOGY																																	
F2																																		
F3																																		
F4																																		
F5																																		
MODEL	Probe model																																	
SERIAL #	Probe serial number																																	
TYPE	Probe type																																	
RANGE 1	Probe range																																	
RANGE 2	Probe range																																	
RANGE 3	Probe range																																	

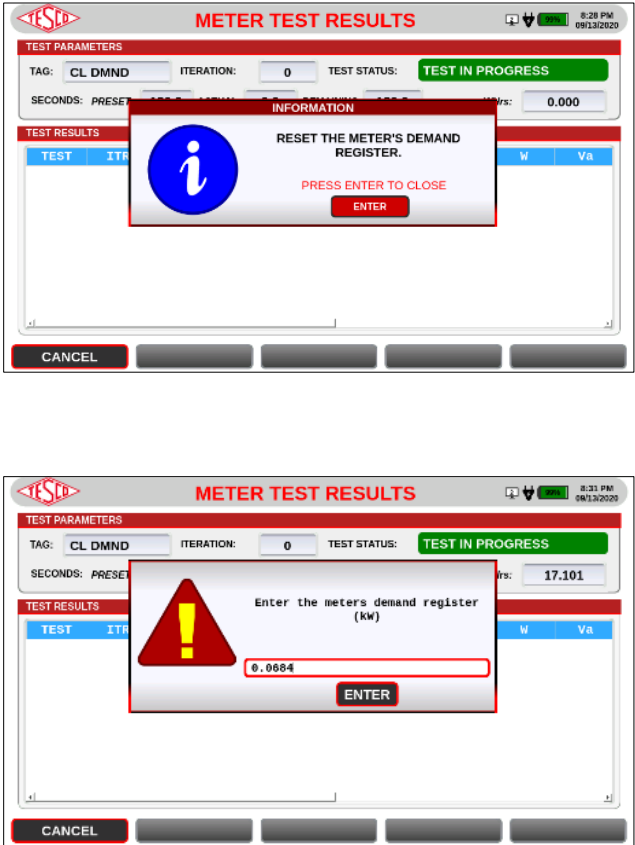
4.0 CONFIGURATIONS

- 4.1 Meter Test Error! Bookmark not defined.
 - 4.1.1 Demand Test Error! Bookmark not defined.
 - 4.1.1 Energy Test Error! Bookmark not defined.
- 4.2 CT Test..... Error! Bookmark not defined.
- 4.3 Sequence Test..... Error! Bookmark not defined.

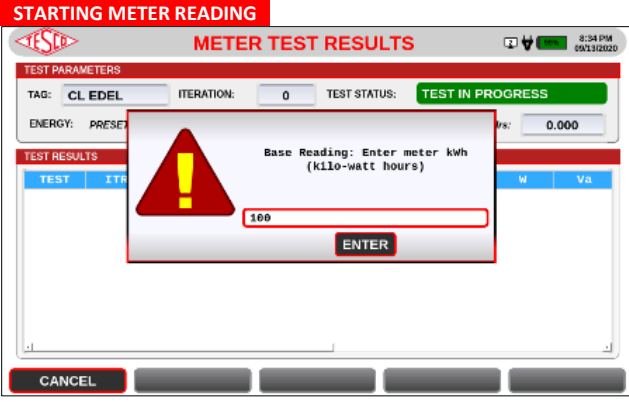
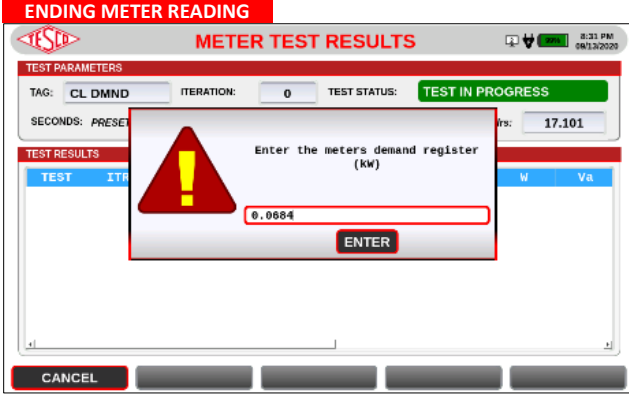
4.1 Meter Test

SCREEN	DESCRIPTION
	<p>HOW TO PERFORM METER TEST:</p> <ol style="list-style-type: none"> 1. If a site was preselected, the test parameters will be automatically filled in. Otherwise, manually input the parameters and select the test load and test type. 2. If an optical probe is attached to the meter, the meter's pulse output can be aligned by pressing F3 [PULSE ALIGN]. It will display the Pulse Alignment Check screen. 3. Once everything is set, press F4 [START] to start the test. 4. Depending on the test type, a pop-up will appear to ask the user to enter a certain value. For example, in the Demand Test, a user will be asked to enter the meter's demand register (kW) to continue with the test. 5. The test will end with the test results shown.

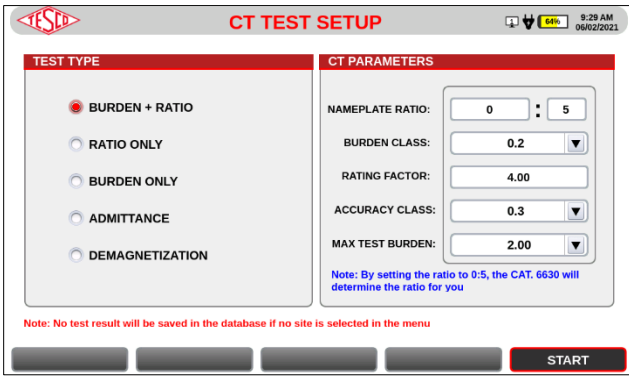
4.1.1 Demand Test

SCREEN	DESCRIPTION
	<p>HOW TO PERFORM DEMAND METER TEST:</p> <ol style="list-style-type: none"> 1. Press F4 [START]. 2. Reset the demand register in the meter. 3. The Site Analyzer will deliver current to the meter for one sub-interval. 4. Read the meter's demand register and enter the value. 5. The Site Analyzer will compute the full interval demand and calculate the registration.

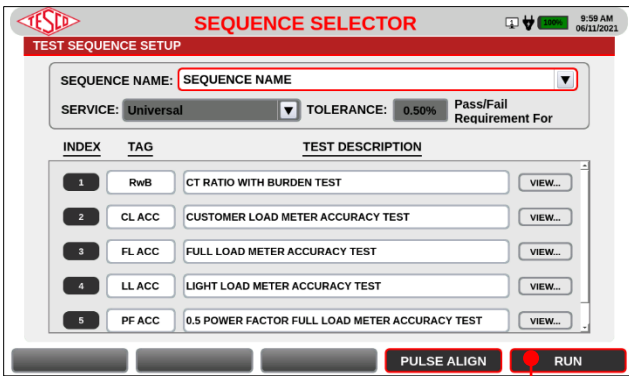
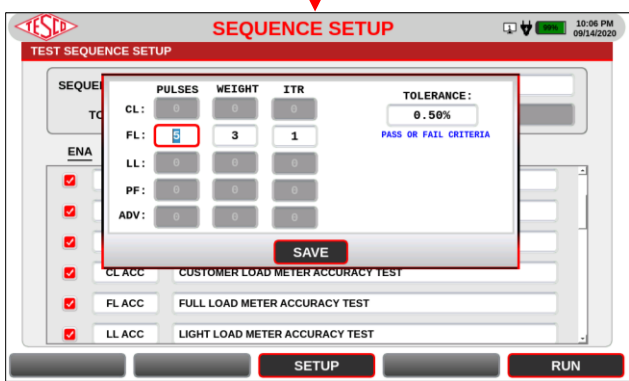
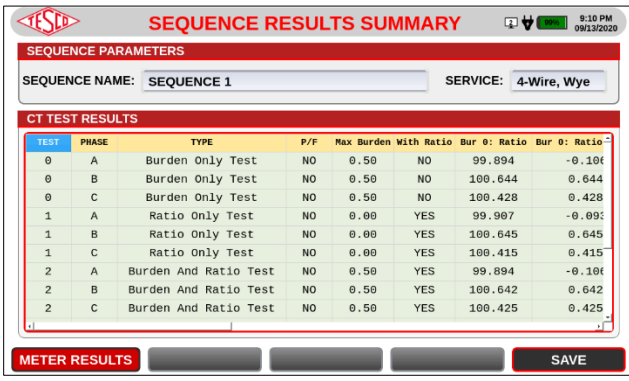
4.1.1 Energy Test

SCREEN	DESCRIPTION
 	<p>HOW TO PERFORM ENERGY METER TEST:</p> <ol style="list-style-type: none"> 1. Press F4 [START]. 2. Enter meter kWh and press the ENTER button. 3. Enter the meters demand register (kW) and press the ENTER button.

4.2 CT Test

SCREEN	DESCRIPTION
	<p>HOW TO PERFORM A CT TEST:</p> <ol style="list-style-type: none"> 1. Select a CT Test type: <ul style="list-style-type: none"> • Burden Only • Ratio Only • Ratio with Added Burden • Admittance 2. After selecting a CT Test Type, enter CT information. If all CTs have the same information, press F2 [COPY 1 TO ALL] to copy the information (except serial number) from CT #1 to the other CTs. 3. If a site was selected, the fields will be automatically filled in. 4. Optional: Demagnetize the CTs by pressing F1 [DEMAG]. This will perform Demag Test to return the CT accuracy to its normal state. 5. Once everything is set, press F5 [START] to start the CT Test. 6. Live results will be shown on the CT Test Results screen, and the data plotting will vary depending on the selected test type.

4.3 Sequence Test

SCREEN	DESCRIPTION
	<p>HOW TO PERFORM SEQUENCE TESTING:</p> <ol style="list-style-type: none"> 1. Select a site in the Main Menu. This is required before Sequence Setup can be accessed. 2. Set the Sequence Name and Tolerance for the pass or fail criteria. The TA and Service can't be changed as they were already configured in the chosen site. 3. Select the tests that will be included in the sequence. Press ← or → to go to the list and press the tab buttons or navigation buttons to move to each test. 4. Press ENTER to select or deselect a test. Tests that will not be included in the sequence are grayed out. 5. If any of the meter test is included, press F3 [SETUP] to configure. This is only available for meter tests. 6. When everything is set, press F5 [RUN] to start the sequence test. This will show the live reading of the results for the first test in the sequence, which in this case is Site Scan. 7. Once the test is completed, press F5 [CONTINUE] to proceed to the next test in the sequence.
	<ol style="list-style-type: none"> 8. If the test needs to be canceled, press F1 [CANCEL]. This will cancel the whole sequence test and will proceed to the Sequence Setup screen. 9. Once the whole sequence is finished, it will show the Sequence Results Summary screen. Press F1 [METER RESULTS / CT RESULTS] to switch between CT Test Results and Meter Test results.
	<ol style="list-style-type: none"> 10. Press F5 [SAVE] to save the test results. View them again later by going to the Main Menu > Database.

5.0 MAINTENANCE

5.1 Introduction 47

5.2 Cleaning the Site Analyzer’s External Surface 47

5.3 Repair / Parts Replacement / Recalibration..... 47

5.1 Introduction

Most of the maintenance will be handled by the technical team from TESCO. The user can, however, perform the basic maintenance routine of cleaning the meter site analyzer's external surface.

5.2 Cleaning the Site Analyzer's External Surface

Clean the exterior of the Site Analyzer using a soft cloth slightly dampened with either water or a non-abrasive mild cleaning solution that is not harmful to plastics.



Do not use hydrocarbons or chlorinated solvents for cleaning. They can damage the plastic materials used in the Site Analyzer.

5.3 Repair / Parts Replacement / Recalibration

For the Site Analyzer's repair, parts replacement, and recalibration, directly contact TESCO through phone or email. See section **1.2 Contacting TESCO** for contact details. TESCO recommends recalibration on an annual basis. Further details can be found on the Calibration Certificate provided with your Site Analyzer.